


Fibo

# Wall panel

B&B FIBO VERG 1018 NO  
Fibo Vergepanel COLOUR COLLECTION 3091 HG DENVER WHITE F01 // 4115 HG LONDON F05

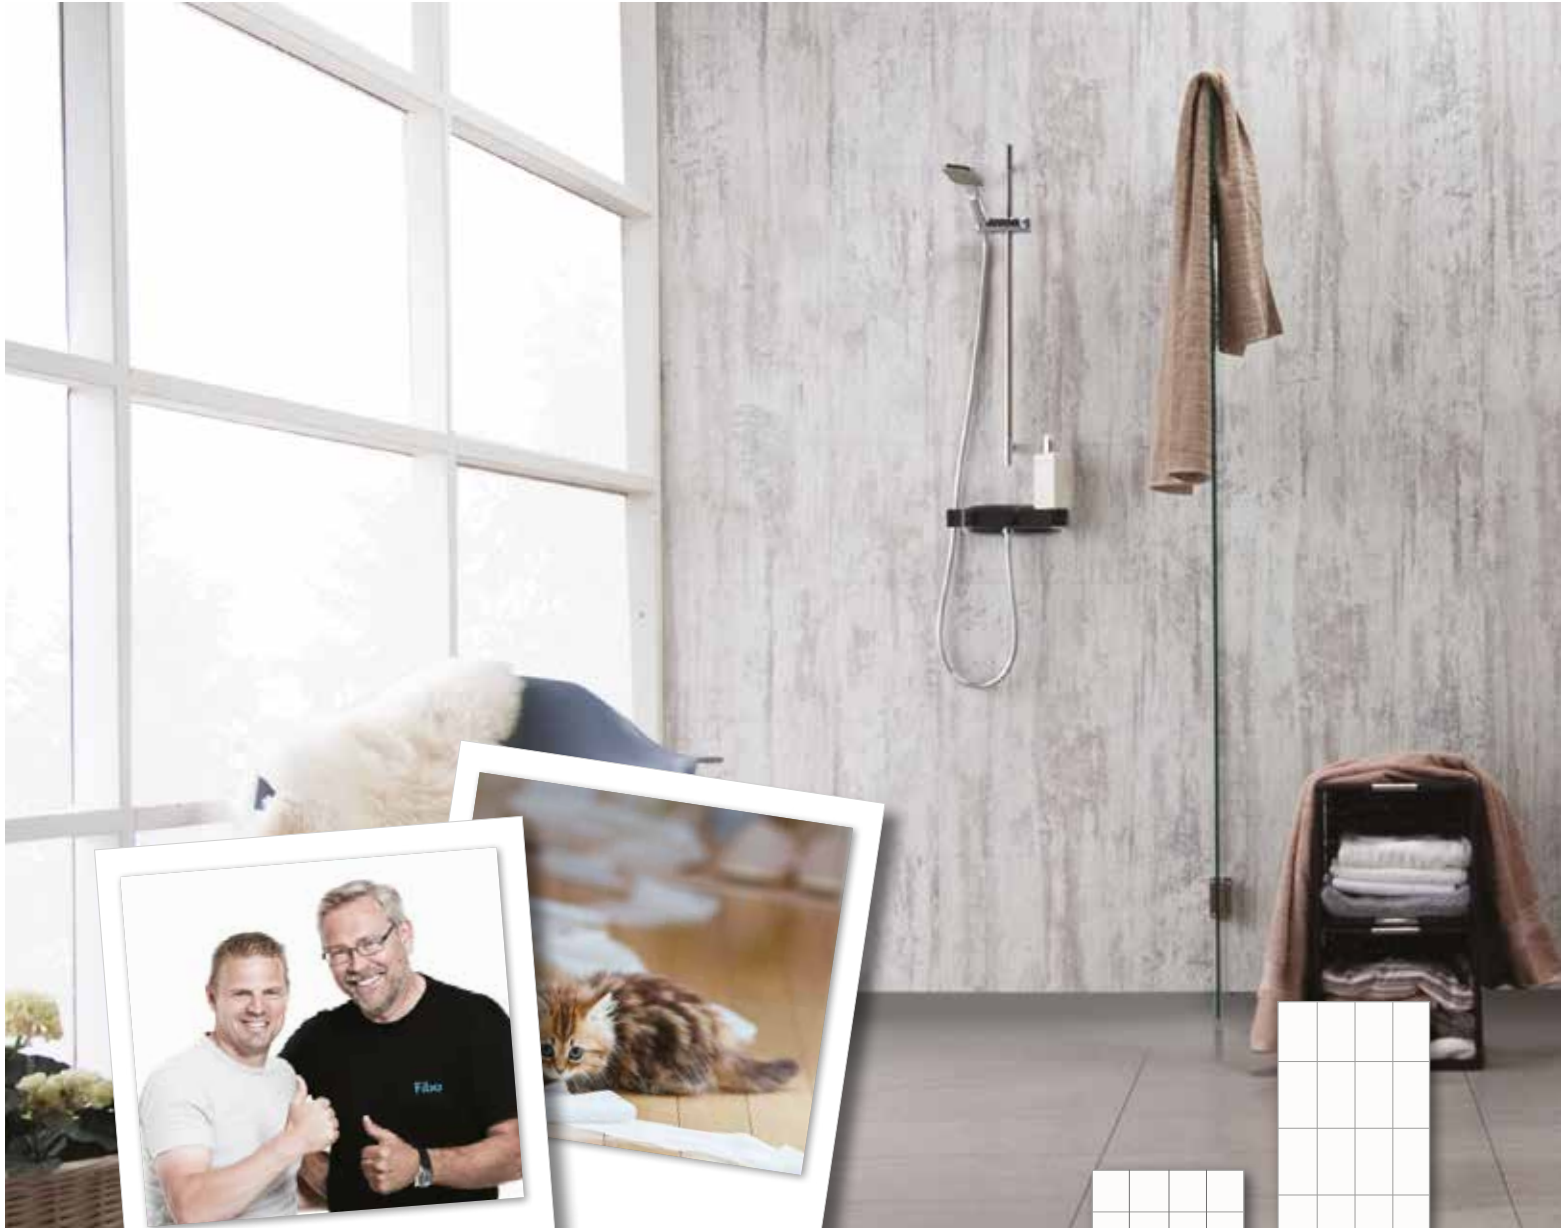





## CONTENT

Crescendo .....	page 04
Marcato .....	page 11
White on White.....	page 26
Fortissimo .....	page 31
Ekstra Large panel .....	page 46
Colour Colection .....	page 48
Legato .....	page 68
Adagio .....	page 69
Teknisk info .....	page 71
Tilbehør .....	page 71
Montering .....	page 72

# NOW WITH EXTRA TALL PANELS!

page 46- 47

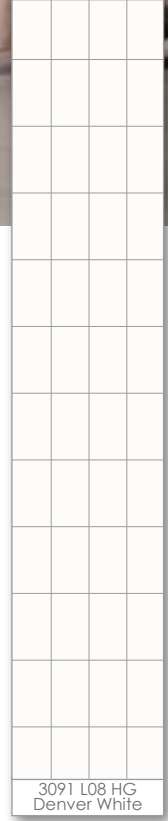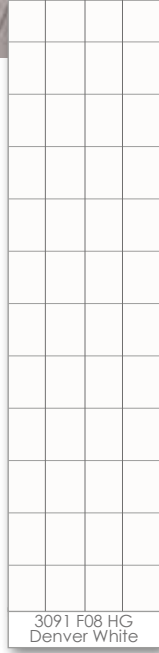

# WALL PANELS

The world of maintenance-free waterproof wall panels from Fibo AS

Design your bathroom walls using high quality wallpanels from Fibo AS. The panels are approved according to the Norwegian plumbing directory and make the work involving plaster, membrane and tiles redundant. Laminate is pressed and hardened onto the plywood panel and forms a waterproof surface. The panel is then milled with a 1.8 or 3.2 mm "groove" which gives the impression of a tile grout line. We also deliver panels without this milling.

Combine panels from our different collections to suit your style. Standard panels are sized 600 mm x 2400 mm. Follow the fitting instructions and you are guaranteed a great result that will last.

The panels can be mounted directly onto studs or on existing walls.



2898 RU M63 Shabby Chic



The smooth and strong surface can withstand both direct water and large temperature fluctuations.

The panels are easy to clean and require very low maintenance. All panels are delivered with our unique AquaLock system.

We have divided our collection into 6 groups by design and appearance and named them: Marcato, Fortissimo, Crescendo, Legato, Adagio and Colour Collection.



1534 Crescendo Sand Grande



1534 Crescendo Sand Grande



1534 Crescendo Sand Grande



# CRES

.. new  
bathro  
in a w



1532 Crescendo Negro Grande and 1533 Crescendo Gris Grande

**CENDO**

*gorgeous  
room walls  
weekend*



1532 Crescendo Negro Grande and 1533 Crescendo Gris Grande



1531 Crescendo Blanco Grande



## CRESCENDO GRANDE

Tile pattern 600 x 300 mm

Crescendo's exclusive surface has a pattern and design matched in perfect 3D.

Also available in another 4 exclusive, contemporary designs with a large tile pattern.



1534 Sand Grande



1534 Sand Grande



1531 Blanco Grande



1531  
Blanco Grande



1534  
Sand Grande



1533  
Gris Grande



1532  
Negro Grande



## CRESCENDO CASABLANCA

Tile pattern 200 x 300 mm

Crescendo collection consists of wall panels with 3D tiling, which means there is a height and surface difference between the tiles.

When fitting Crescendo, check the alignment of the border prior to final fitting.





1526 Casablanca  
Grigio - grey/brown



1528 Casablanca  
Artico - light grey





0194 Marina Grey Oak M6040 and 3091 Denver White M6040

# MARCATO

Marcato collection comes in a variety of colours, surfaces and tile sizes.

Choice of white or grey grout lines.


Wallpanels having the same colour and grout line can be used in combination with each other.




# MARCATO

Grout line 1,8, and grout colour white


Design M00  
No tile pattern

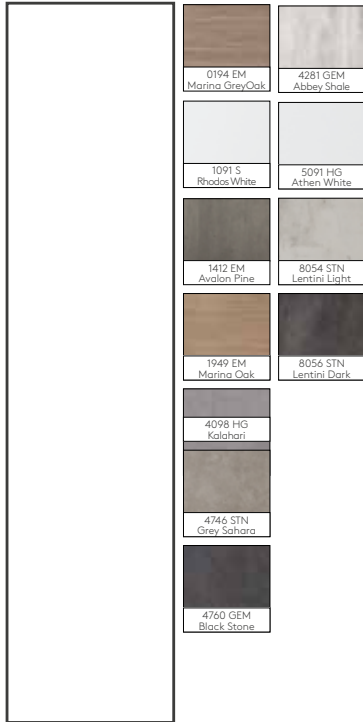


Design M10  
grout to the right

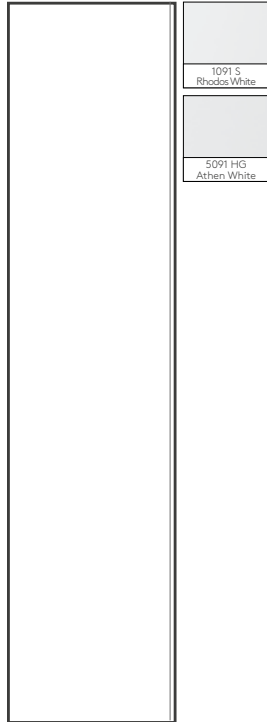


Design M0303  
3 x 3 cm

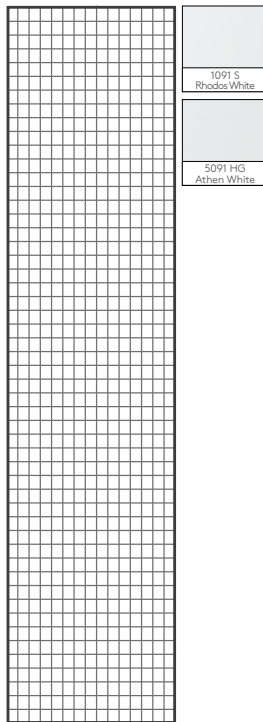


Design M2007  
20x7 cm

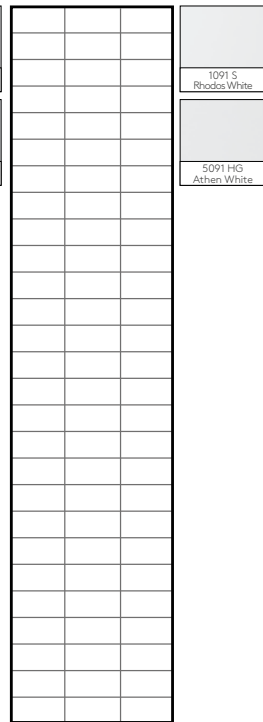


Design M3005  
30 x 5 cm

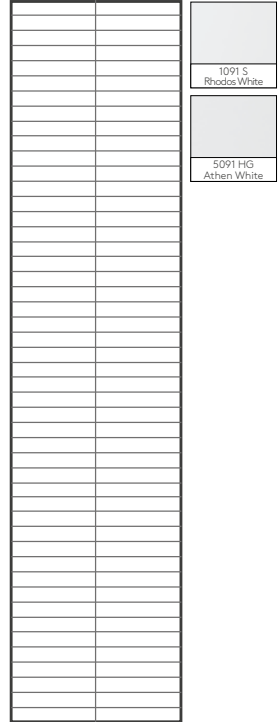

Design M6015  
60 x 15 cm

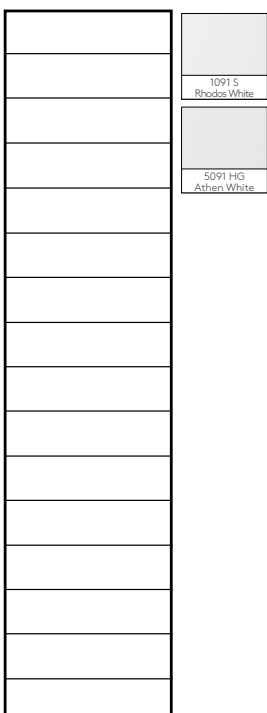


Design M6020  
60 x 20 cm

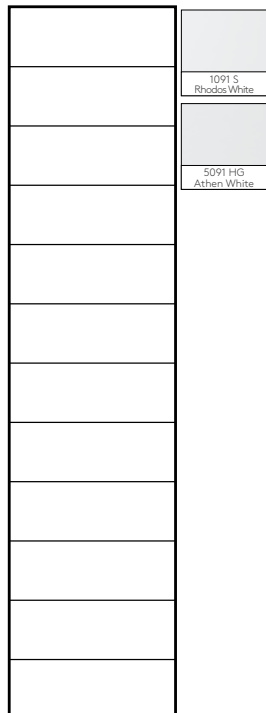


Design M6040  
60 x 40 cm



Design M6030  
60 x 30 cm

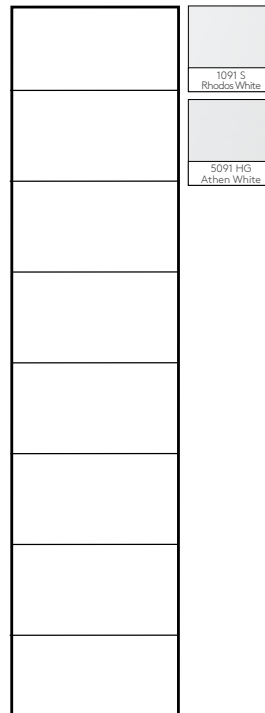

Design M6060  
60 x 60 cm

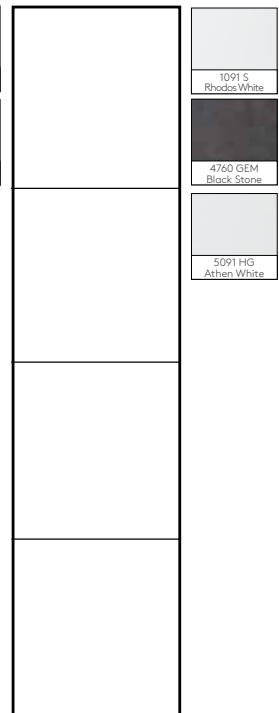


Note: the colours may differ slightly from the actual product. Be sure to check an actual laminate sample before making your choice.  
Abbreviations: HG = High Gloss, G = Gloss, S = Silk, SL = Slate, FW = Fresh Wood (rough surface) EM = Extra Matt, RU = Rustic, SA = Spatolato, SC = Saw cut, C = Cement, P1 = Matt surface with high gloss pattern (The pattern do not repeat)

# MARCATO

Grout line 1,8, and grout colour grey

Design F00/M00  
No tile pattern

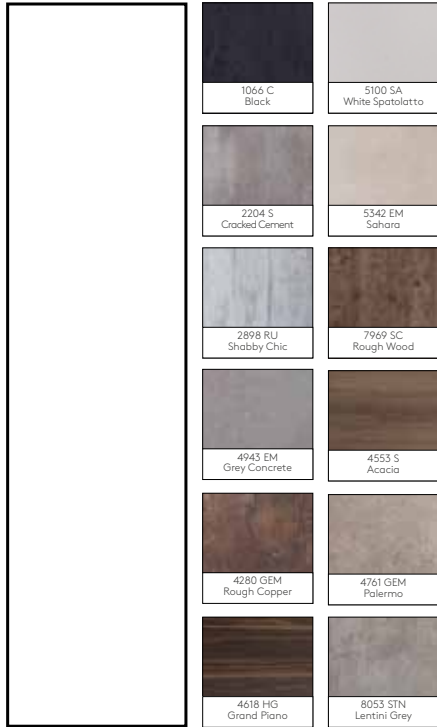

Design M10  
grout to the right



Design M66/M6060  
60 x 60 cm



Design M63/M6030  
60 x 30 cm





# MARCATO DESIGN Moo

Plain panel- No tile pattern



1066 C  
Black



2204 S  
Cracked Cement




2898 RU  
Shabby Chic



4943 EM  
Grey Concrete



5100 SA  
White Spatolato

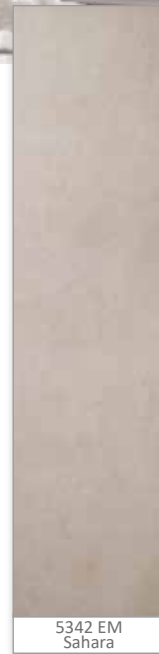

5342 EM  
Sahara



4280 GEM  
Rough Copper



4553 S  
Acacia



4618 HG  
Grand Piano



4761 GEM  
Palermo



7969 SC  
Rough Wood



8053 STNC  
Lentini Grey




## MARCATO DESIGN Moo

Plain panel- No tile pattern



0194 EM  
Marina Grey Oak

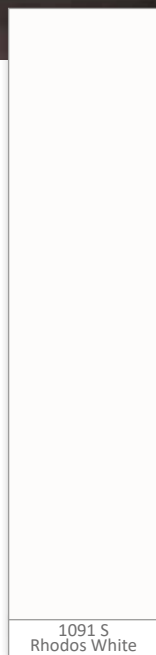

1091 S  
Rhodos White



1412 EM  
Avalon Pine




1949 EM  
Marina Oak



4098 HG  
Kalahari



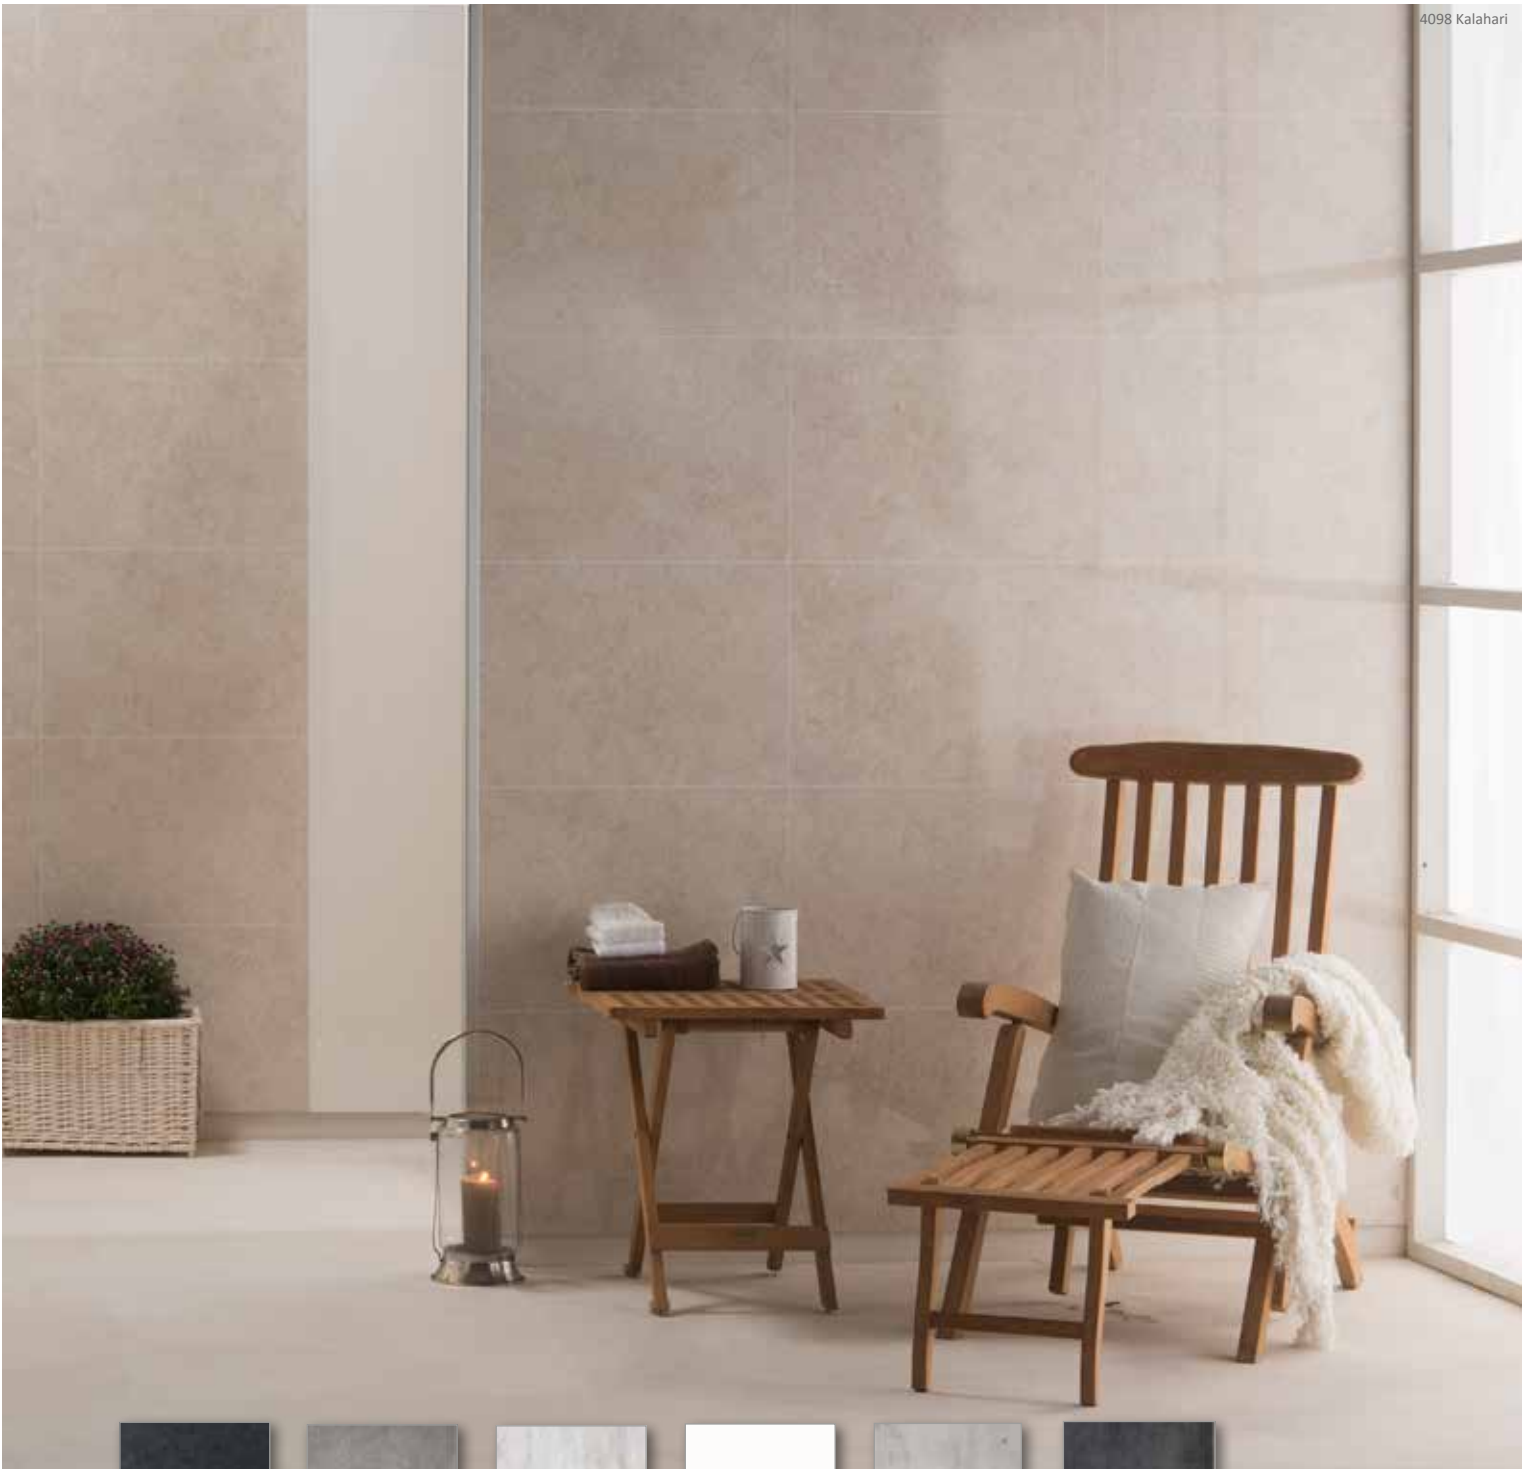


4760 GEM  
Black Stone



4746 STN  
Grey Sahara



4281 EM  
Abbey Shale



5091 HG  
Athen White



8054 STN  
Lentini Light



8056 STN  
Lentini Dark




## MARCATO DESIGN M63/M6030

Tile pattern 600 x 300 mm

Marcato M63 with large tiles and thin grout lines give a contemporary look to your walls.

Enjoy the special surface and ambiance these panels provide.



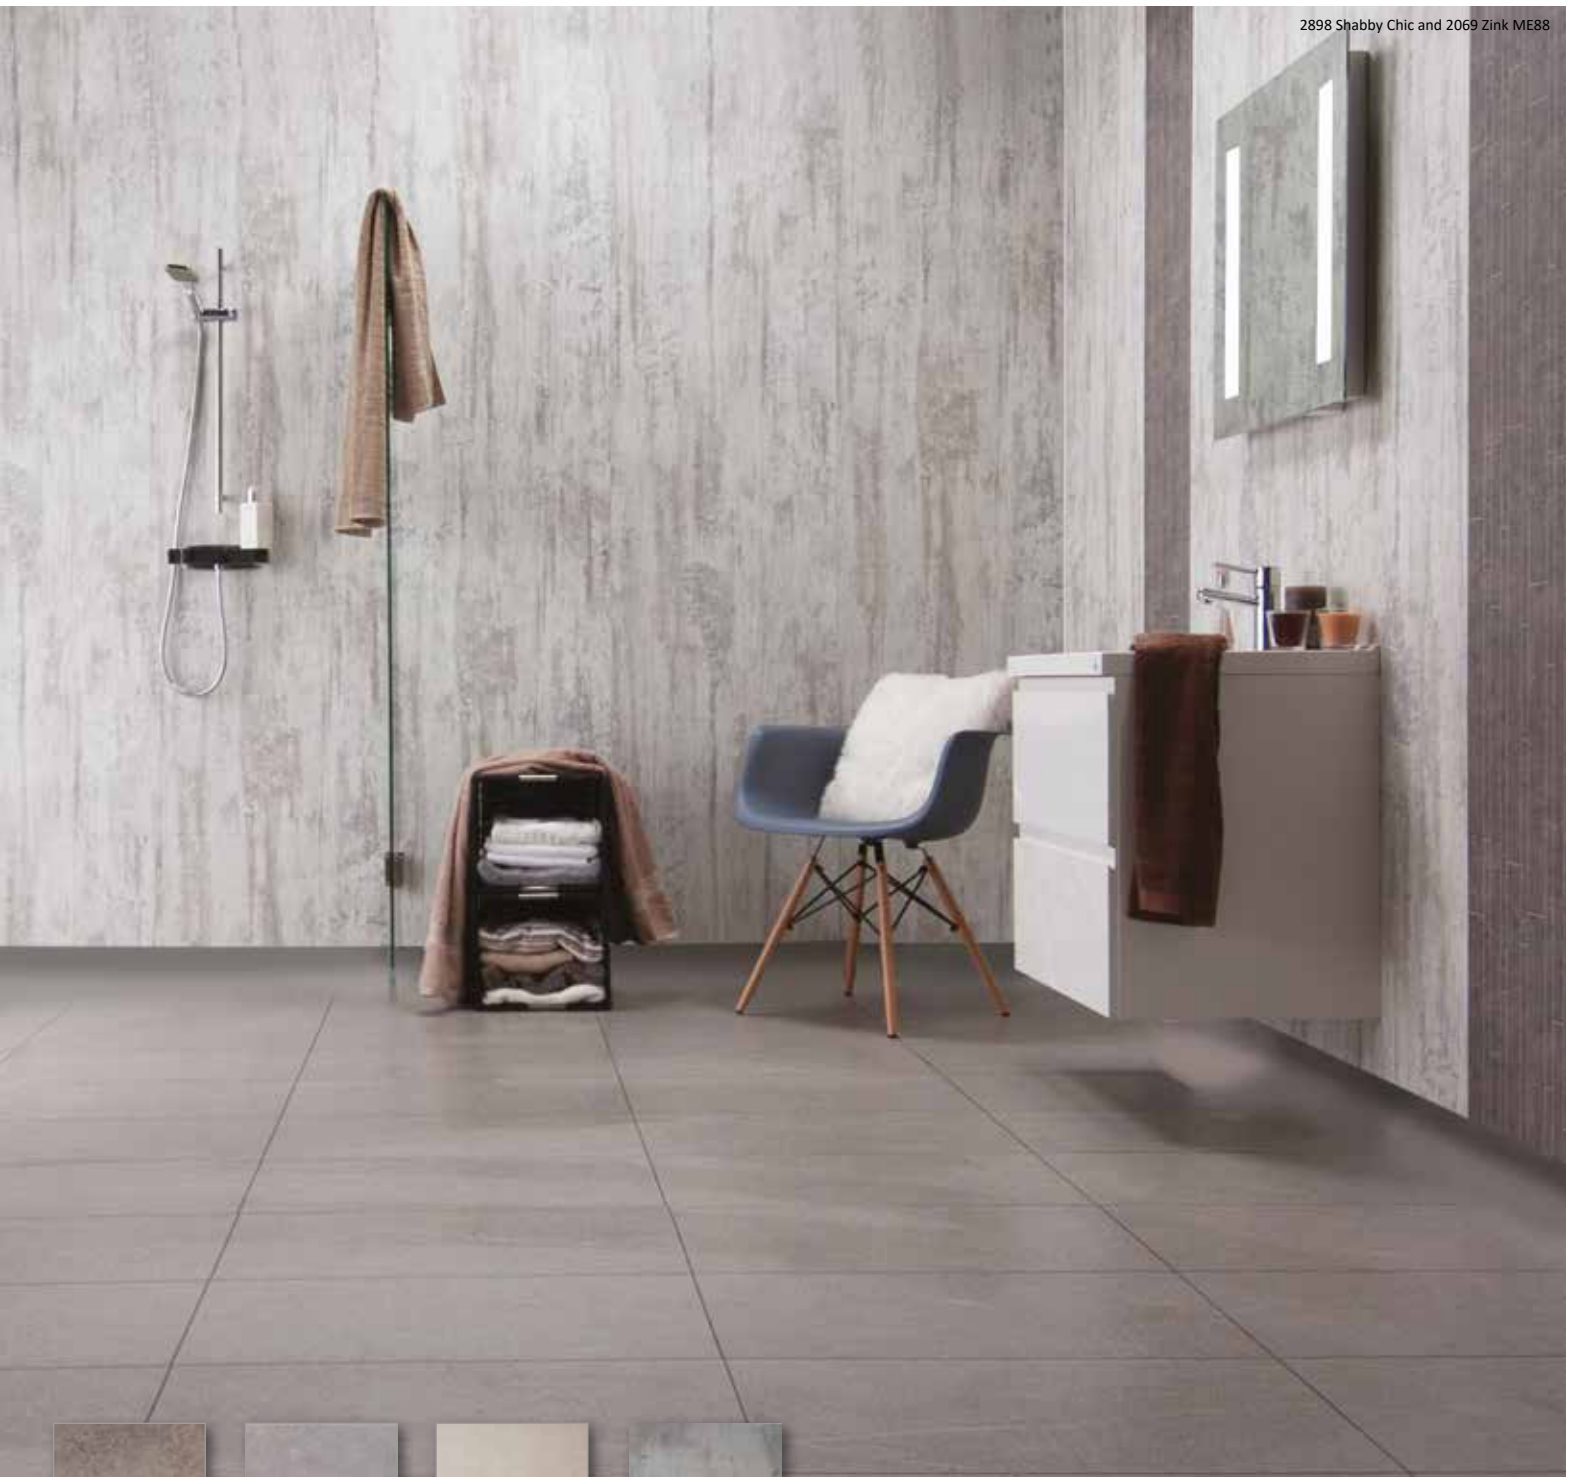


4761 GEM  
Palermo



4943 EM  
Grey Concrete



5342 EM  
Sahara

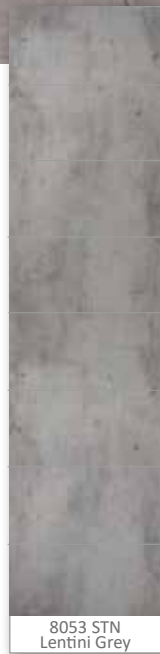

8053 STN  
Lentini Grey



8054 STN Lentini Light M6040



8056 STN Lentini Dark M6040




## MARCATO DESIGN M6040

Tile pattern 600 x 400 mm


With large surfaces and sleek designs, these decors have a thin white grout line which is 1.8 mm wide.



0194 EM  
Marina Grey Oak

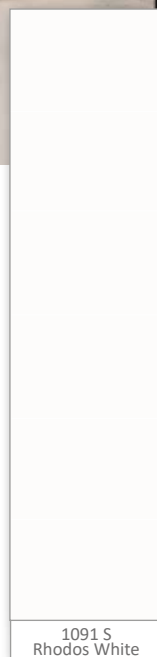

1091 S  
Rhodos White

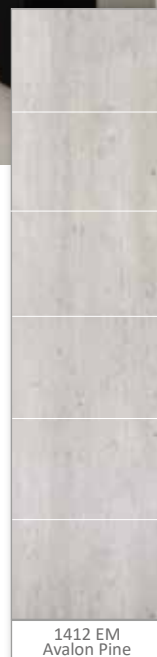

1412 EM  
Avalon Pine



1949 EM  
Marina Oak



4098 HG  
Kalahari



4746 STN  
Grey Sahara



4281 EM  
Abbey Shale



5091 HG  
Athen White



8054 STN  
Lentini Light



8056 STN  
Lentini Dark





## MARCATO DESIGN M66/M6060

Tile pattern 600 x 600 mm  
Large surfaces and a stunning design.

These decors come with a grey grout line  
which is 1.8 mm wide.







4280 GEM  
Rough Copper



5100 SA  
White Spatolato

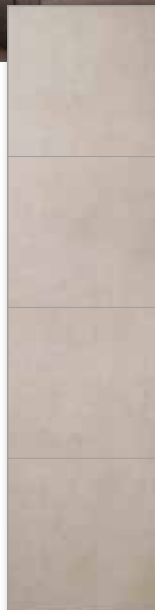

5342 EM  
Sahara

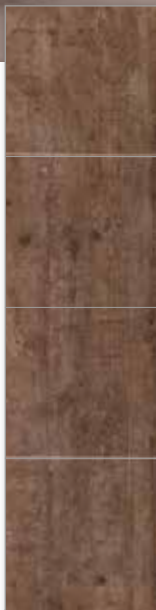

7969 SC  
Rough Wood






## MARCATO DESIGN M66/M6060

Tile pattern 600 x 600 mm  
Large surfaces and a stunning design.

These decors come with a white grout line  
which is 1.8 mm wide.

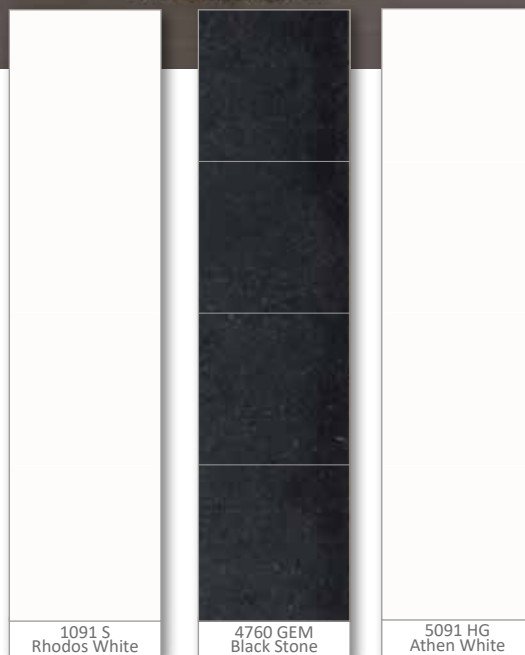






## MARCATO DESIGN ME88

Decorative panel 30 cm wide

Narrow panels especially intended for use between other full width panel designs to add a touch of elegance to your bathroom.

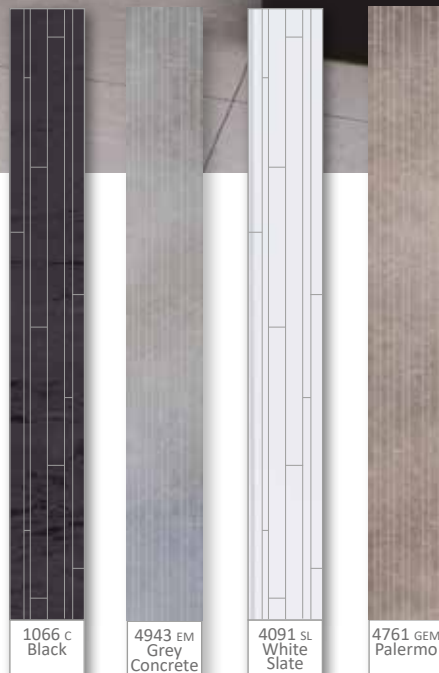



3091 HG F01 Denver White

The Fortissimo collection comes in a variety of colours, surfaces and tile patterns. The laminate is pressed and hardened onto the panel and forms a waterproof surface. The panel is milled with a 3.2 mm wide "groove" which gives the impression of a tile grout line.



# FORTISSIMO

Most of the Fortissimo panels have the same tile line colour and width so can therefore be mixed and matched just as you prefer. The exception is 2520 Ivory F23, 2586 Santiago F22 and 2506 Toscana F23 which have a narrower gap between the "tiles" than the rest of the Fortissimo range.

Surface finish :

HG = High Gloss

G = Gloss, S = Silk

SL = Slate

FW = Fresh Wood (rough surface)


PI = Matt surface with high gloss pattern




# MARCATO

Grout line 2,5mm or 3,5mm, and grout line colour grey

**Design F00**  
No tile pattern

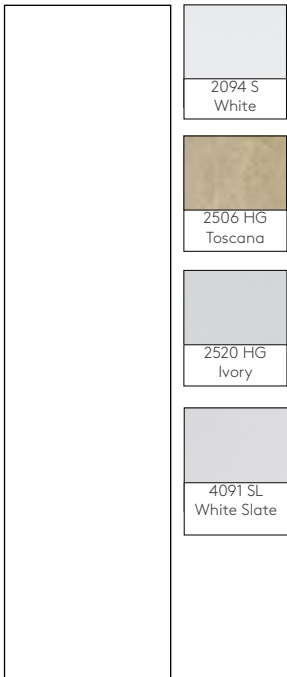


**Flower**  
No tile pattern




\*Black Flower finnes også i 1200x2400 mm.

NB! Vi gjør oppmerksom på at Black og White Flower ikke har repeterende mønster!


**Design F01**  
60 x 40 cm




**Design F03**  
30 x 5 cm

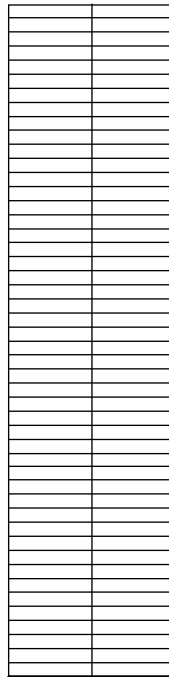



**Design F05**  
60 x 20 cm

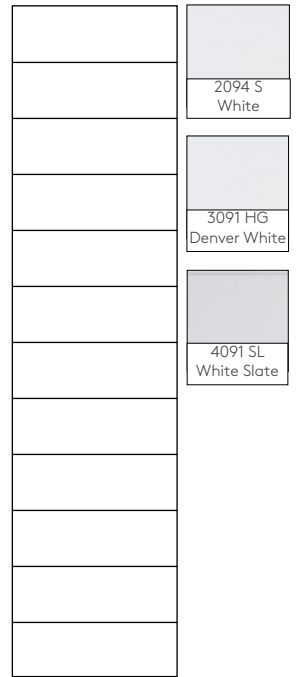


**Design F08**  
15 x 20 cm

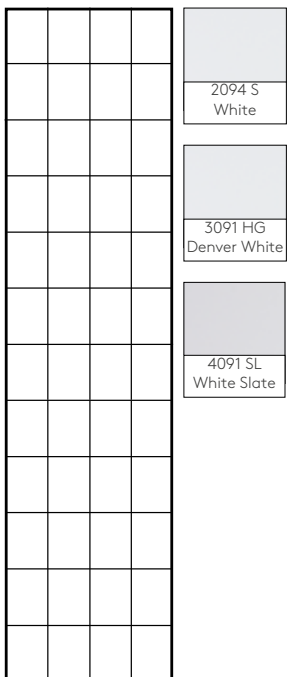


**Design F22**  
30 x 40 cm

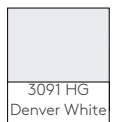


**Design F23/F2030**  
20 x 30 cm  
\*Fugebredde 2,5mm

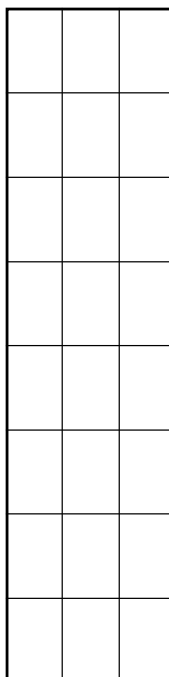

**Design F24**  
60 x 15 cm



**Design F25**  
15 x 15 cm

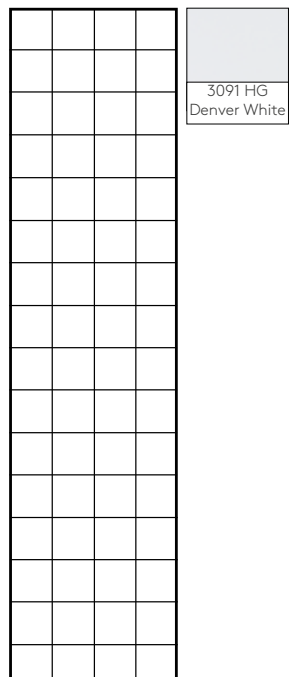

Note: the colors may differ slightly from the actual product.

Abbreviations: HG = High Gloss, G = Gloss, S = Silk, SL = Slate, EM = Extra Matt, RU = Rustic, SA = Spatolato, SC = Saw cut, C = Cement, P1 = Matt surface with high gloss pattern (Pattern do not repeat).

\* = Grout line 2,5mm

# EXTRA TALL PANELS

Grout line 3,5mm, and grout line colour grey

3020MM HEIGHT


**Design L00**  
No tile pattern

**Design L01**  
60 x 40cm


**Design L08**  
15 x 20 cm

**Design L23**  
20 x 30 cm

**Design 24**  
60 x 15 cm

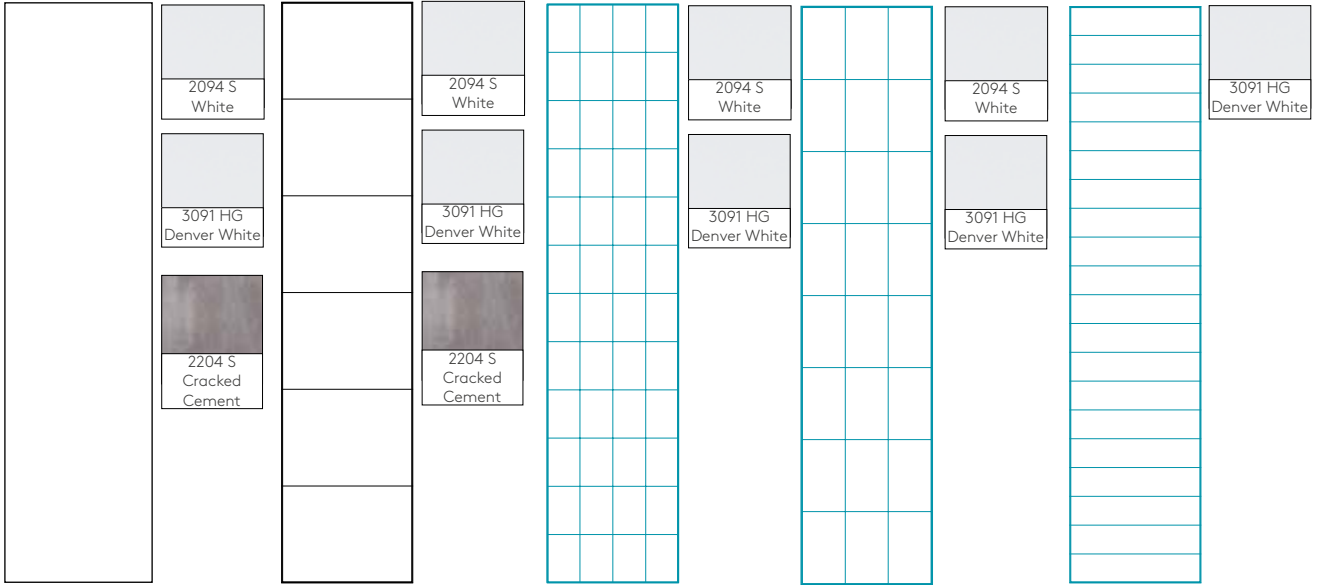

3020 AND 2720MM HEIGHT

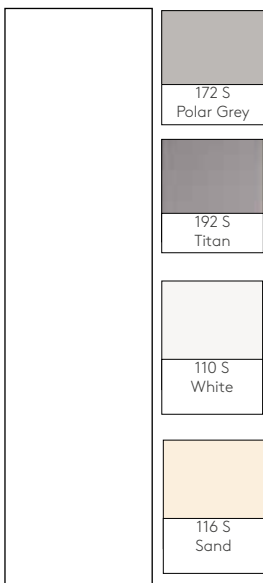





4943 EM M63 Grey Concrete and 2094 S M66 White

## FORTISSIMO DESIGN Foo


Plain panel- no tile pattern

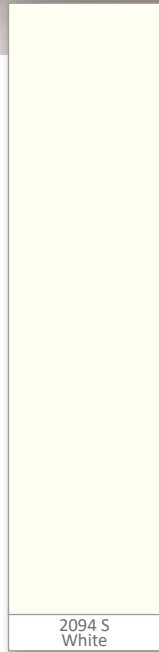


2094 S  
White

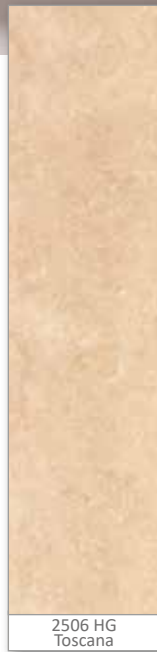

2506 HG  
Toscana

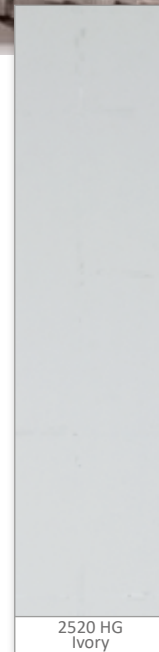


2520 HG  
Ivory

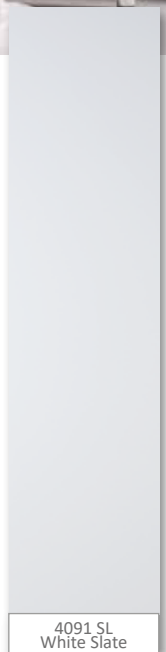

4091 SL  
White Slate



4280 Rough Copper M 6060 and 1091 Rhodos White M 6030

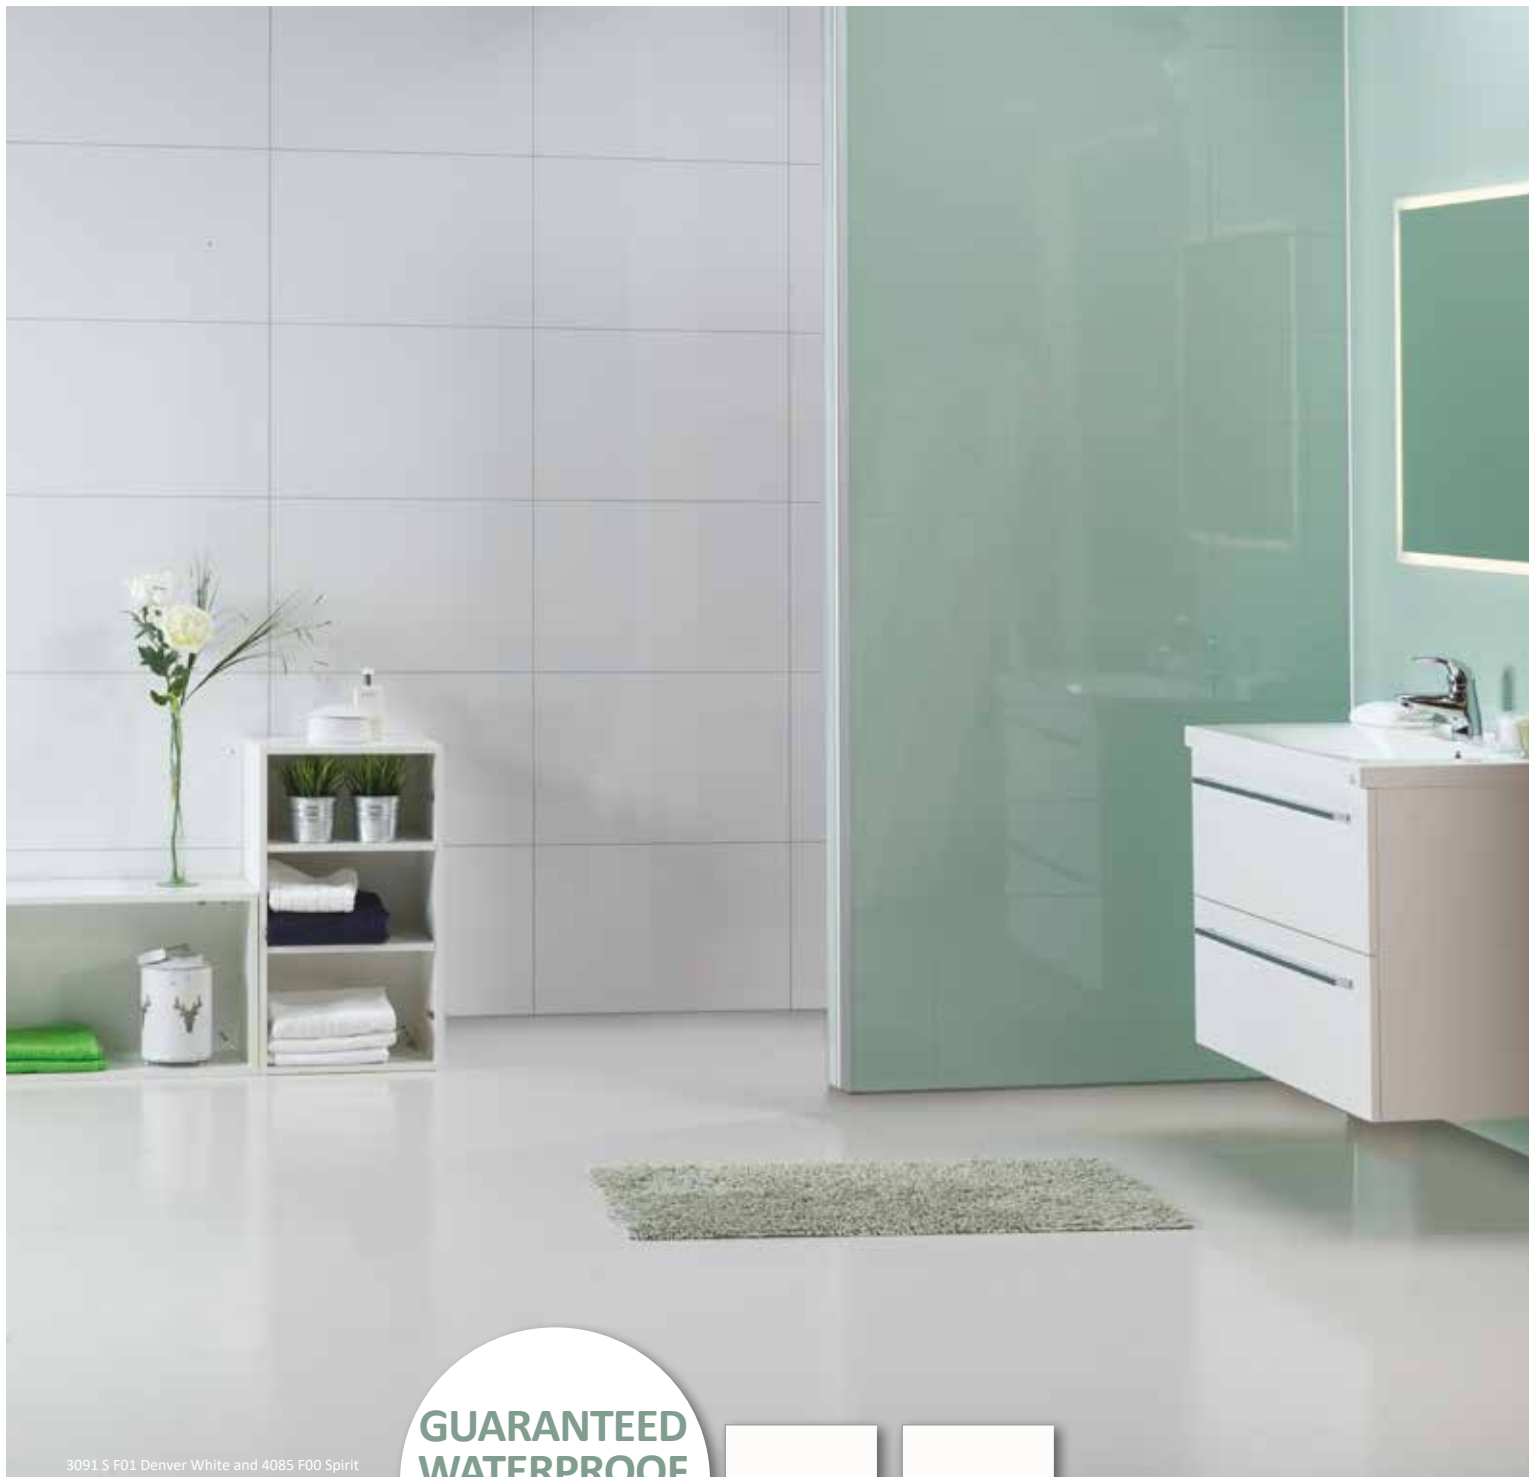

3091 S F01 Denver White and 4085 F00 Spirit

**GUARANTEED  
WATERPROOF  
- EVEN IN THE  
SHOWER !**

## **FORTISSIMO DESIGN F01**

Design F01- wall panel with a large tile pattern.

The pattern is 600 x 400 mm and a great for use in combination with other designs.








3091 HG F03 and F08 Denver White

## FORTISSIMO DESIGN F03

Wall Panel with tile pattern 300 x 50 mm  
in classic and bright colours.

Combine different colours and tile sizes and  
create something unique. Bathing every  
morning becomes a special treat from now on!

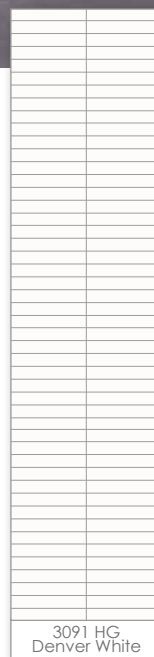

3091 HG  
Denver White




4091 SL F05 White Slate

## FORTISSIMO DESIGN F05

Wall panel with tile pattern 600 x 200 mm  
for a classic and beautiful bathroom.

You can combine patterns and design your room exactly  
the way you prefer. The possibilities are endless.

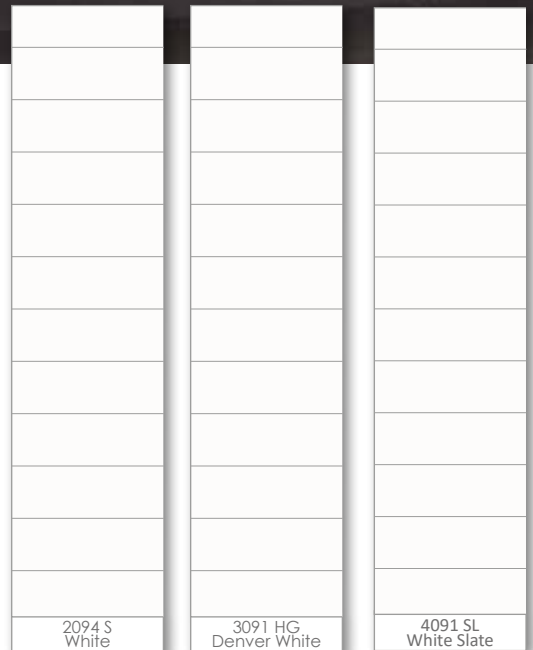




3091 HG F05 og F08 Denver White

## FORTISSIMO DESIGN F08


Wallpanel with tile pattern 150 x 200 mm.

Design F08 has the classic size and decor, that we all recognize and enjoy.


Choose between three different surface finishes.

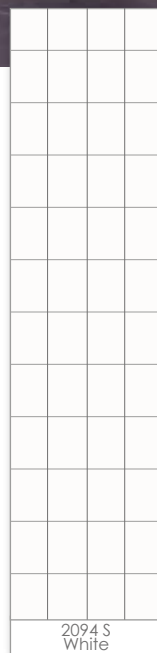

2094 S  
White

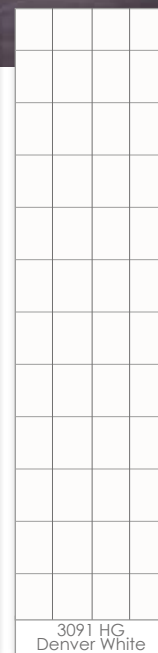

3091 HG  
Denver White

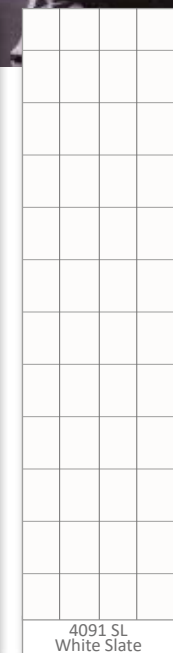

4091 SL  
White Slate



## FORTISSIMO DESIGN F22

Tile pattern 300 x 400 mm

With our simple installation, you can renew your bathroom walls in a weekend!

Most of the panel designs in the Fortissimo range have the same size and colour of tile grout line so you can mix and match the panels just as you like.

The exception is 2520 Ivory F23, 2586 Santiago F22 and 2506 Toscana F23 which have a narrower gap between the "tiles" than the rest of the Fortissimo range.








## FORTISSIMO DESIGN F24

Tile pattern 600 x 150 mm

No matter the size of your room, Fibo Wall Panels provide freedom of choice at an affordable price.

Wall Panel Design F24 and F25- classic and beautiful. A combination of these designs can look stylish and classy or simply use the one design for your entire bathroom.

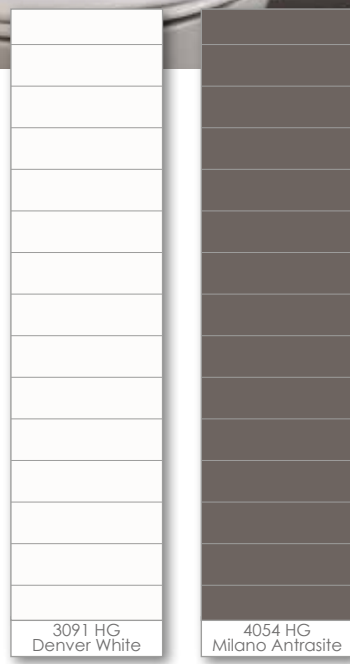



4054 HG F03 and F24 Milano Antrasite and 3091 HG F30 Denver White

# FORTISSIMO DESIGN F25

Tile pattern 150 x 150 mm



3091 HG  
Denver White



3091 HG F25 Denver White



## BLACK & WHITE FLOWER

Wallpanel no tile pattern, 600 x 2400 mm

These panels are best suited as decorative panels as the pattern is not repeated. Black and White Flower also comes in a 1200 mm width and can easily be combined with other Fibo Wall Panel decors.

The pattern is a tone-on-tone matt/gloss and the delicate flower pattern changes appearance with your lighting and when viewed at different angles.

Pattern do not repeat




9417 P1  
White Flower



0901 P1  
Black Flower





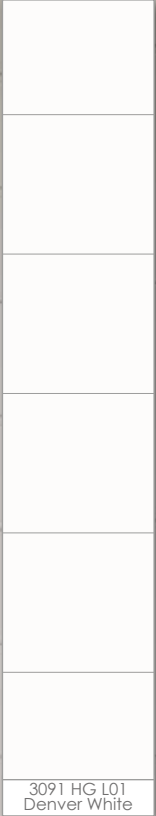

3091 HG L01  
Denver White



2094 S L01  
White



3091 HG L00  
Denver White  
11x620x3020mm



2094 S L00  
White  
11x620x3020mm



2204 S L00  
Cracked cement  
11x620x3020mm


## HIGH CEILING?

For special ceiling heights and a dramatic effect, we have our long panels at 3020mm which give you an extra 620mm of length from our standard panels.


Current building styles with new ceiling heights require more from developers and products. Fiboo are the only manufacturer that currently supply panels with height of 3020 mm.



2204 S L01  
Cracked cement

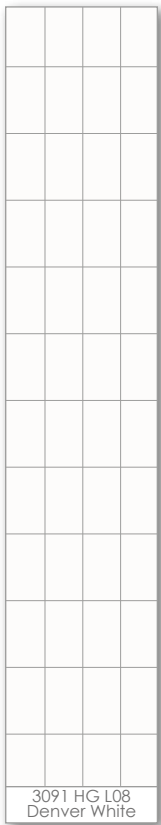


3091 HG L08  
Denver White

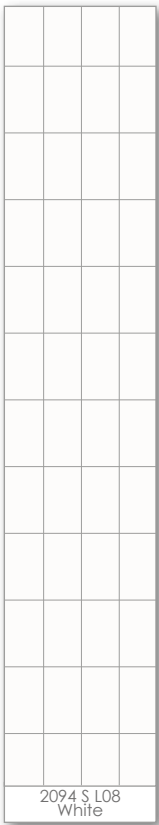


2094 S L08  
White



2094 S White L23

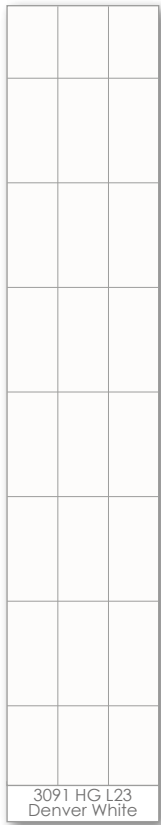

3091 HG L23  
Denver White

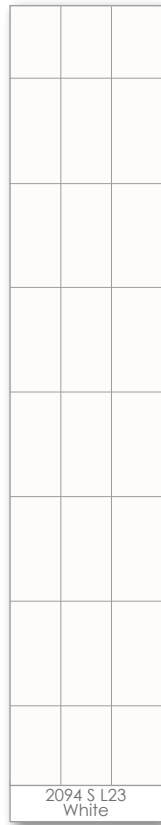

2094 S L23  
White



3091 HG L24  
Denver White



3091 HG L23 Denver White and 4054 HG L24 Milano Antrasite

2101 HG Red Tile F03 and 3091 HG White Tile F24



0529 Havana M00 and M6040 and 5091 HG Athen



0092 Marrakech M6040 and 1091 S Rhodos M6040



COLOUR  
COLLECTION

....What  
dream of  
bath



# OUR SECTION

What do you  
of for your  
room?



# COLOUR COLLECTION HIGH GLOSS



2124 High gloss  
**New York Black**  
NCS S 9000-N



4115 High gloss  
**London**  
NCS S 3500-N



4063 High gloss  
**Oslo**  
NCS S 2500-N



4054 High gloss  
**Milano Antrasite**  
NCS S 6502-Y



4060 High gloss  
**Morning**  
NCS S 2005-Y40R



4149 High gloss  
**Beach**  
NCS S 3010-Y60R



6063 High gloss  
**Sunflower**  
NCS S 0550-Y



4136 High gloss  
**Rose**  
NCS S 0580-Y20R



2444 High gloss  
**Lilac**  
NCS S 2030-R30B



2174 High gloss  
**Creme**  
NCS S 0505-Y50R



2122 High gloss  
**Orange**  
NCS S 1070-Y50R



2101 High gloss  
**Red**  
NCS S 2570-Y90R



1194 High gloss  
**Sky**  
NCS S 6020-R90B



1732 High gloss  
**Heaven**  
NCS S 3030-R90B



2196 High gloss  
**Sea Breeze**  
NCS S 5040-R80B



2212 High gloss  
**Aquamarine**  
NCS S 3020-B50G




4085 High gloss  
**Spirit**  
NCS S 1515-G20Y



2446 High gloss  
**Hope**  
NCS S 5070-G60Y



6062 High gloss  
**Spring**  
NCS S 1080-G30Y



3091 High gloss  
**Denver White**  
NCS S 0500-N

3091-F01 High gloss

Denver  
White




6063-F00 High gloss

Sunflower

## DESIGN COLOUR COLLECTION HIGH GLOSS

Panel 620 x 2400 mm

grout 1,8 mm grey / 3,5 mm grey

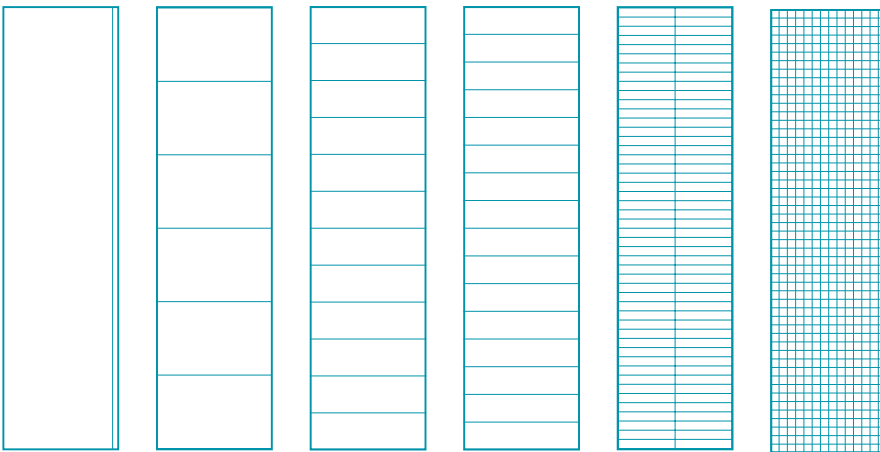

M10/F10

M6040/F01

M6020/F05

M6015/F24

M3005/F03

M0303/F30

No tile  
pattern

60 x 40 cm

60 x 20 cm

60 x 15 cm


30 x 5 cm

3 x 3 cm

**Fuge 1,8 mm grey**

**Fuge 3,5 mm grey**

**No tile pattern**

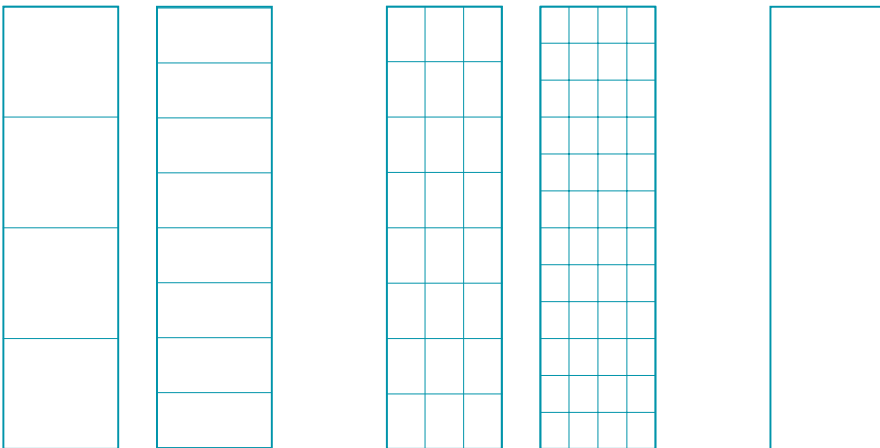

M6060

M6030

F23

F08

M00/F00

60 x 60 cm

60 x 30 cm

20 x 30 cm

15 x 20 cm

No tile  
pattern

Note: the colours may differ slightly from the actual product.



3091 HG F01 Denver White and 2212 HG F05 Aquamarine



## HEAVEN AND SEA

In the past blue was an expensive colour to produce. Only kings and very wealthy people could afford blue clothing or paint- hence the term "royal blue". In fact, in portraiture, it was common to be painted wearing blue even if you did not own any blue clothes.




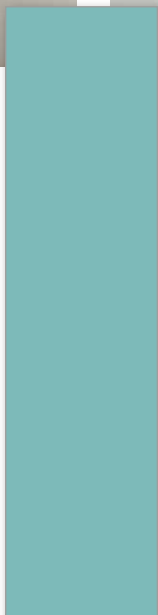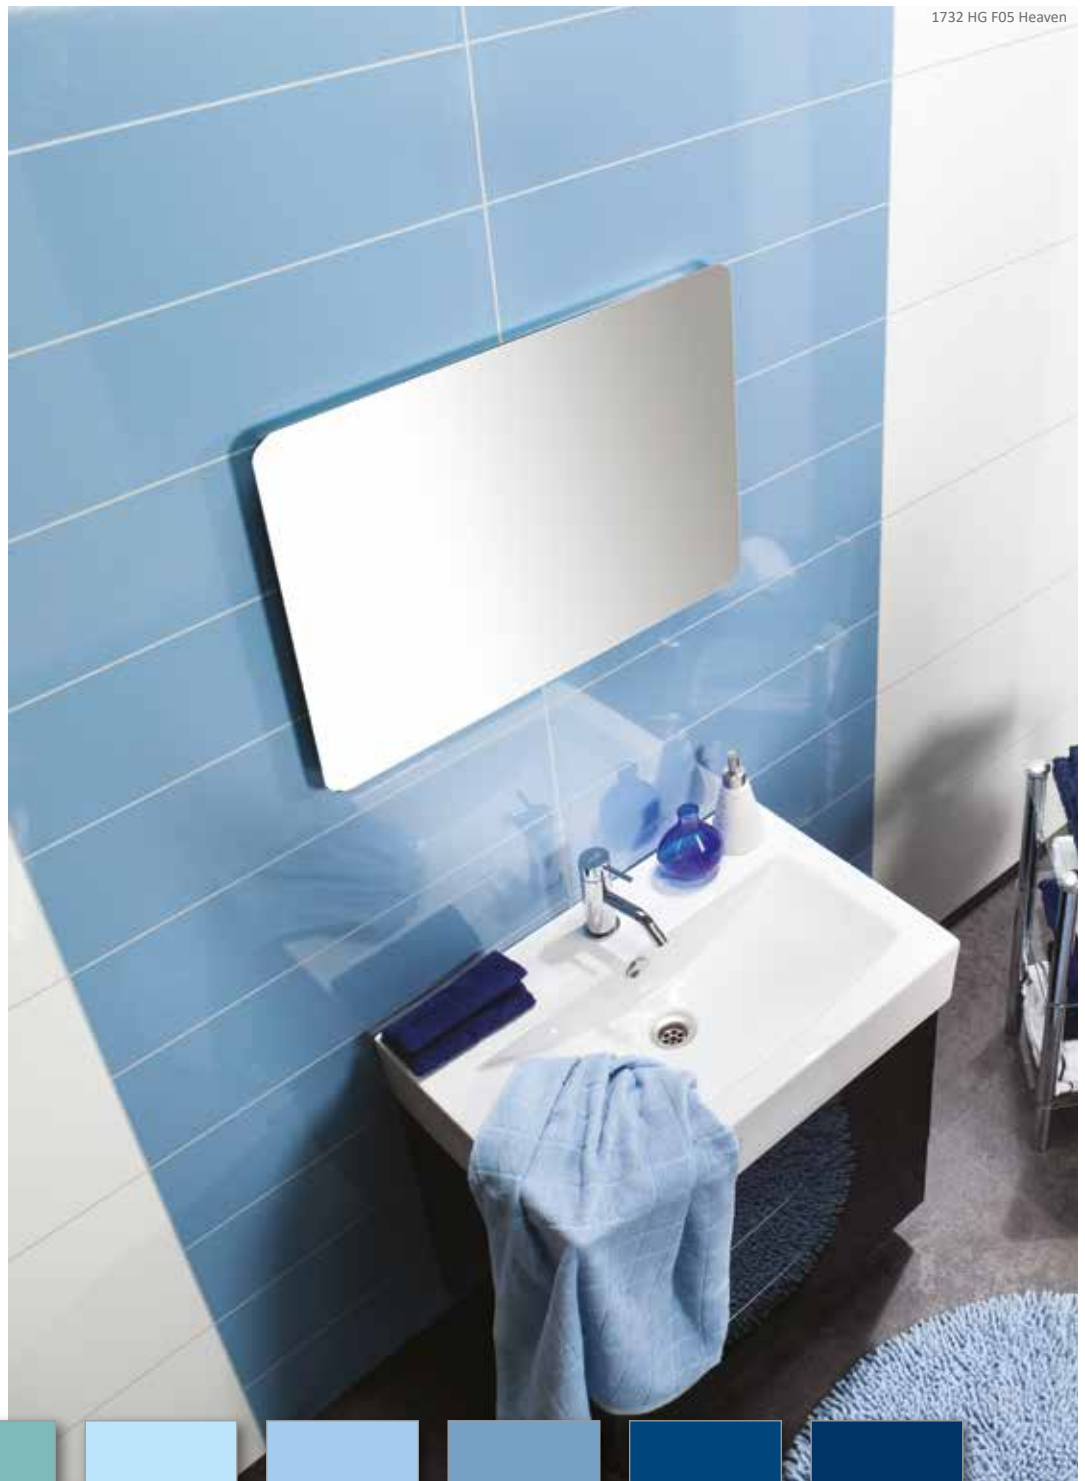


2212 HG Aquamarine  
NCS S 3020 B50G



1194 HG Sky  
NCS 1020 R90B

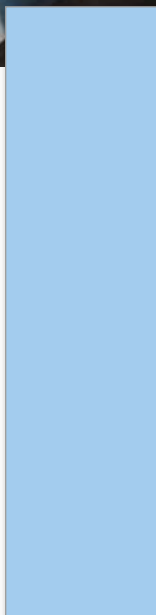

1051 HG Horizon  
NCS S 2020 - R90B

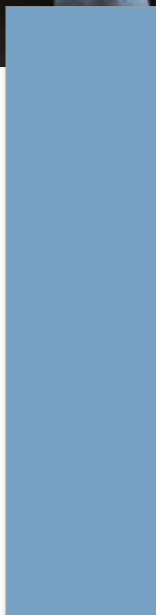

1732 HG Heaven  
NCS S 3030 R90B



2196 HG Sea Breeze  
NCS S 5040-R80B



1304 HG Dark Blue  
NCS S 6030 - R80B

3091 HG F01 Denver White and 6063 HG F00 Sunflower



6063 HG Sunflower




## OPTIMISM AND LIGHT


Yellow, in the form of yellow ochre pigment made from clay, was one of the first colours used in prehistoric cave art. The cave of Lascaux in France has an image of a yellow horse estimated to be 17,300 years old.

Yellow is valued because of its high visibility. The colour of taxis and school buses, in some countries, it has also replaced red as the colour of emergency vehicles.


Yellow is commonly associated with gold, wealth, sunshine, reason, happiness, optimism and pleasure.

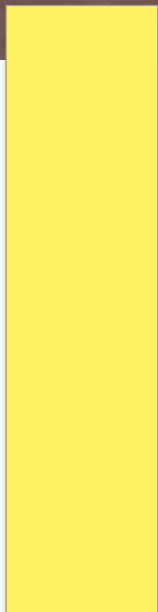

6063 HG Sunflower  
NCS S 0550-Y

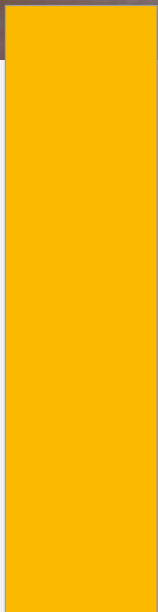

4136 HG Rose  
NCS S 0580-Y20R

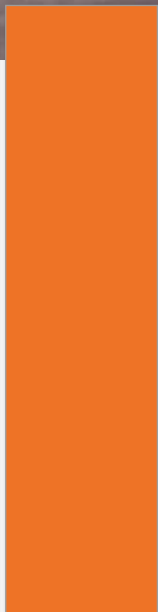


2122 HG Orange  
NCS S 1070-Y50R



1866 HG Love  
NCS S 2070-Y70R



2101 HG Red  
NCS S 2570 - Y90R

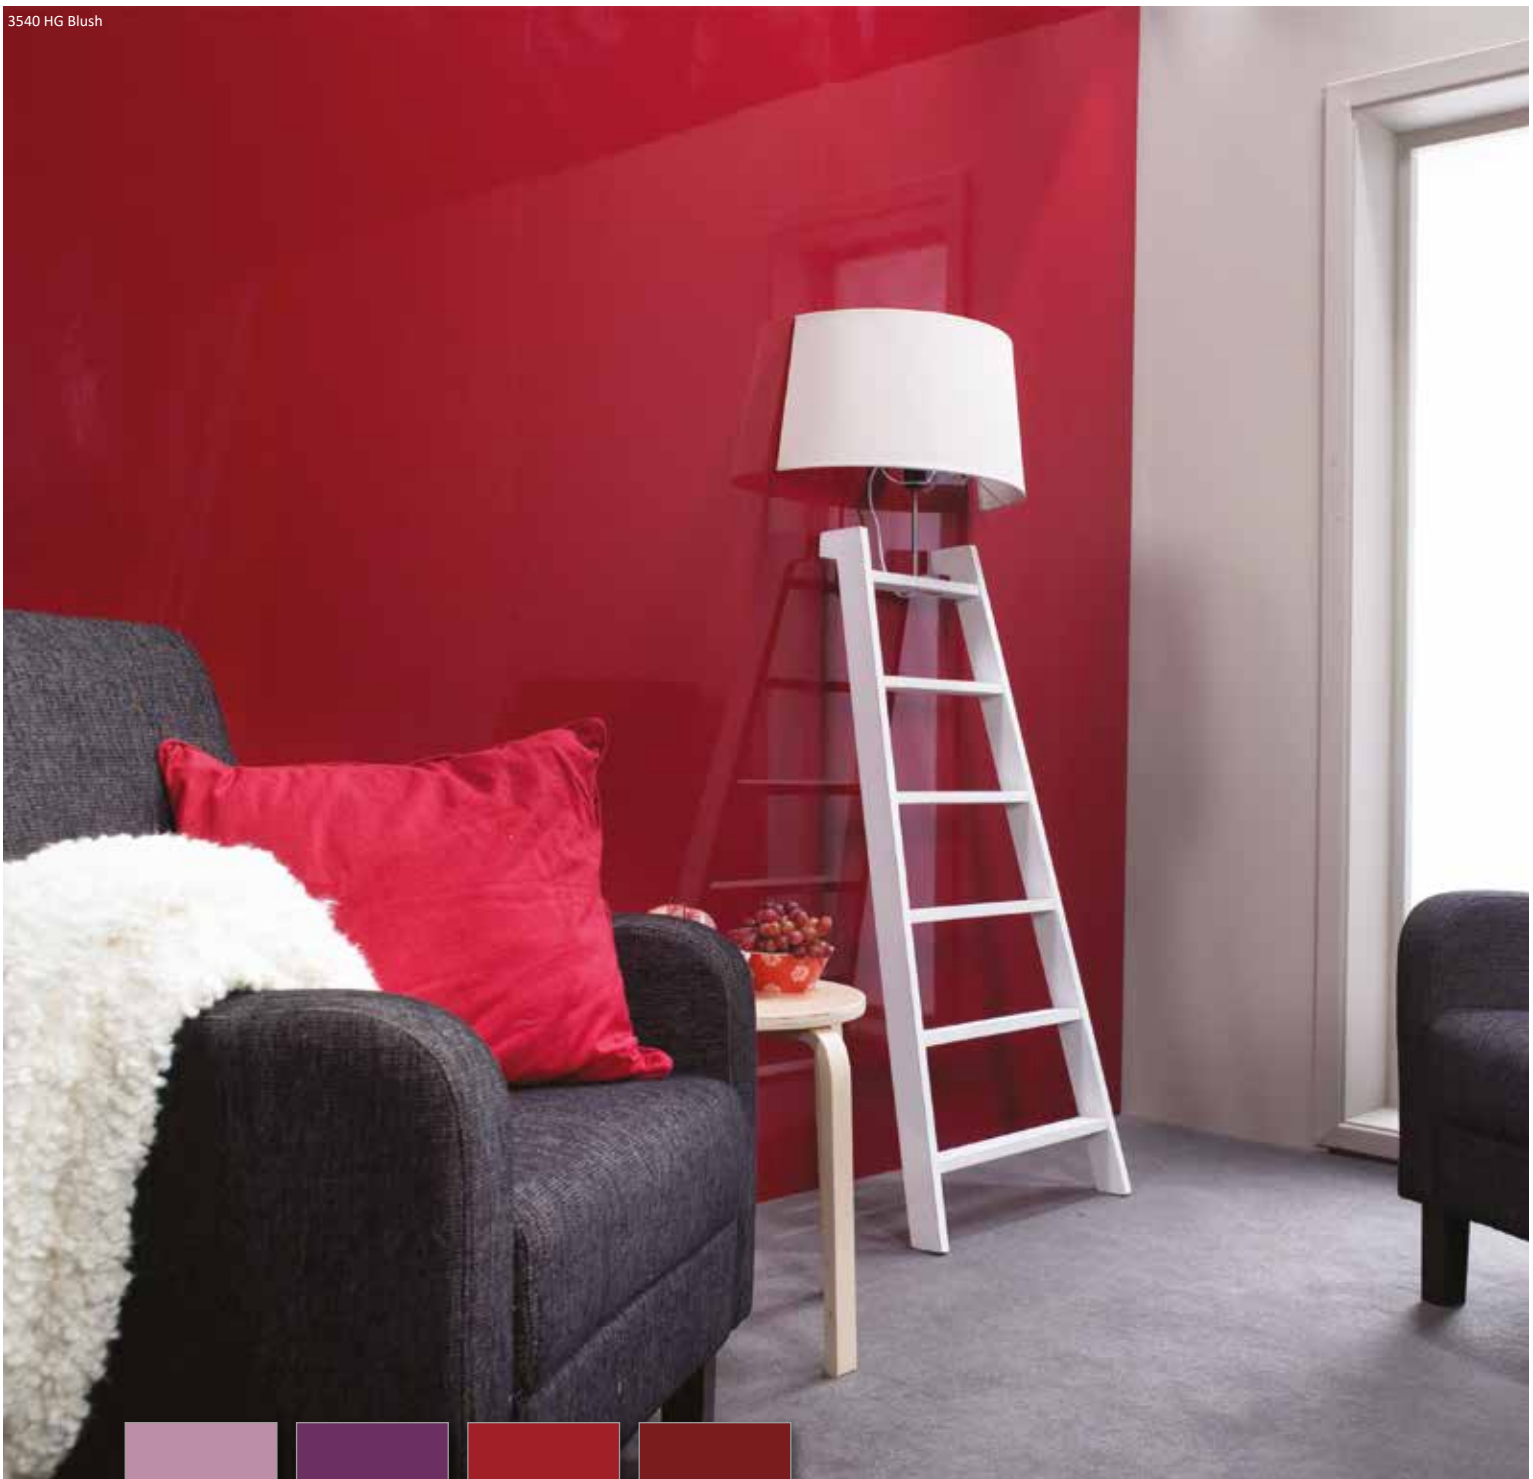
4118 HG Princess  
NCS S 2020-R20B2444 HG Lilac  
NCS S 6030-R30B3540 HG Blush  
NCS S 3560 R4143 HG Purple  
NCS S 5540 - Y90R

## NOBILITY AND JUSTICE

Purple was one of the first colours used in pre-historic art. Sticks of manganese and hematite powder were used to draw and paint animals and other objects on cave walls. These works have been dated to between 16,000 and 25,000 BC.

In the 15th century, the process of making purple and red dye was long, difficult and expensive. Purple became the colour of kings, nobles, priests and magistrates.

Purple and red colours have, through the ages, been associated with extravagance and individualism. They are often used to attract attention.

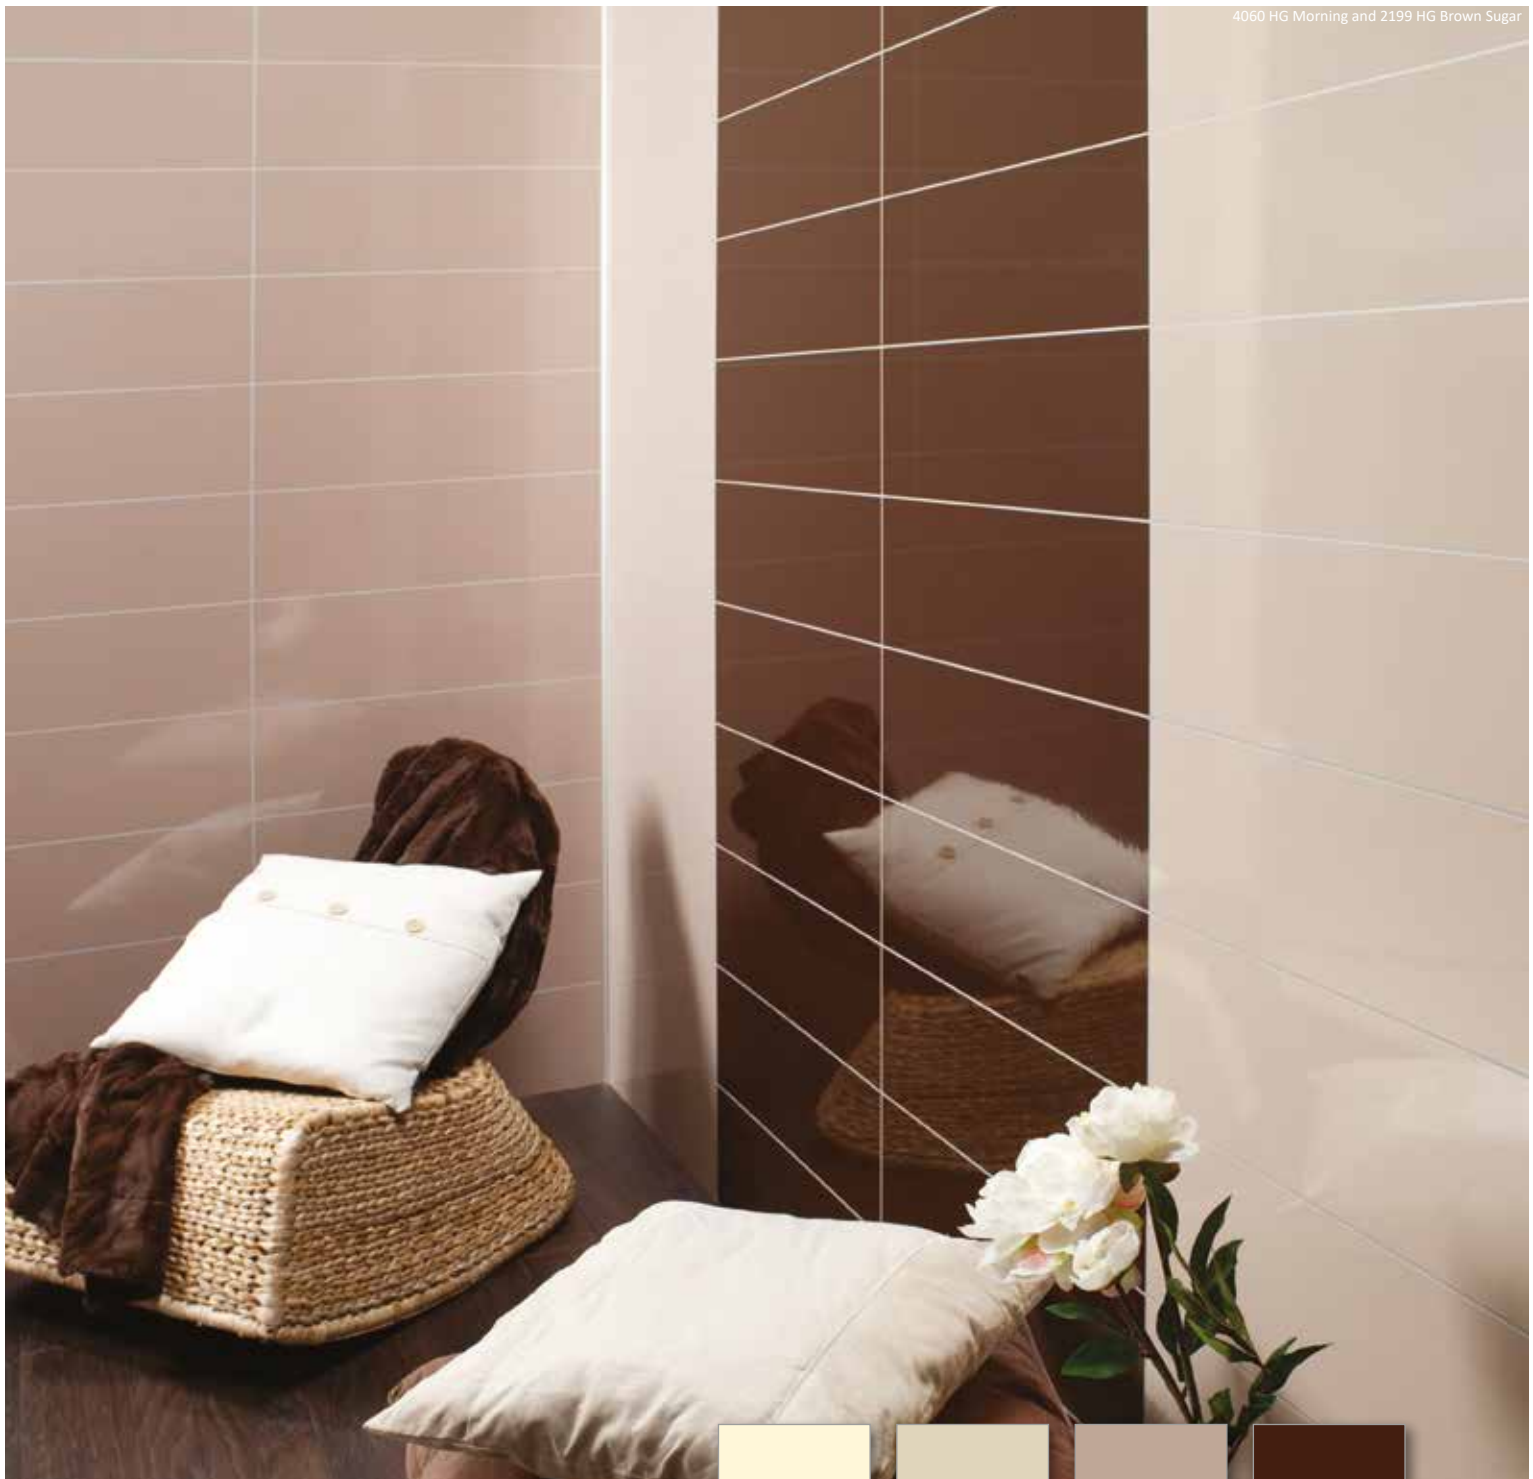

## SAND AND EARTH


The first recorded use of beige as a colour name in English was in 1887. Beige, ranging from bright to deep tones, is a combination of yellow, red and brown.

Light beige tones promotes calm and tranquility whilst the deeper tones are a welcome contrast. Beige tones are associated with sandy beaches, cafe latte, cinnamon spice, tree bark and gives your interior a natural feel.





4085 HG Spirit  
NCS S 1515 -G20Y



2446 HG Hope  
NCS S 0570- G60Y



6062 HG Spring  
NCS S 1080-G30Y




1237 HG Grass  
NCS S 3560-G

## GRASS AND NATURE


The modern English word green comes from the Middle English and Anglo-Saxon word grene, from the same Germanic root as the words "grass" and "grow".

Green colours are most commonly associated with nature, youth, spring and hope.

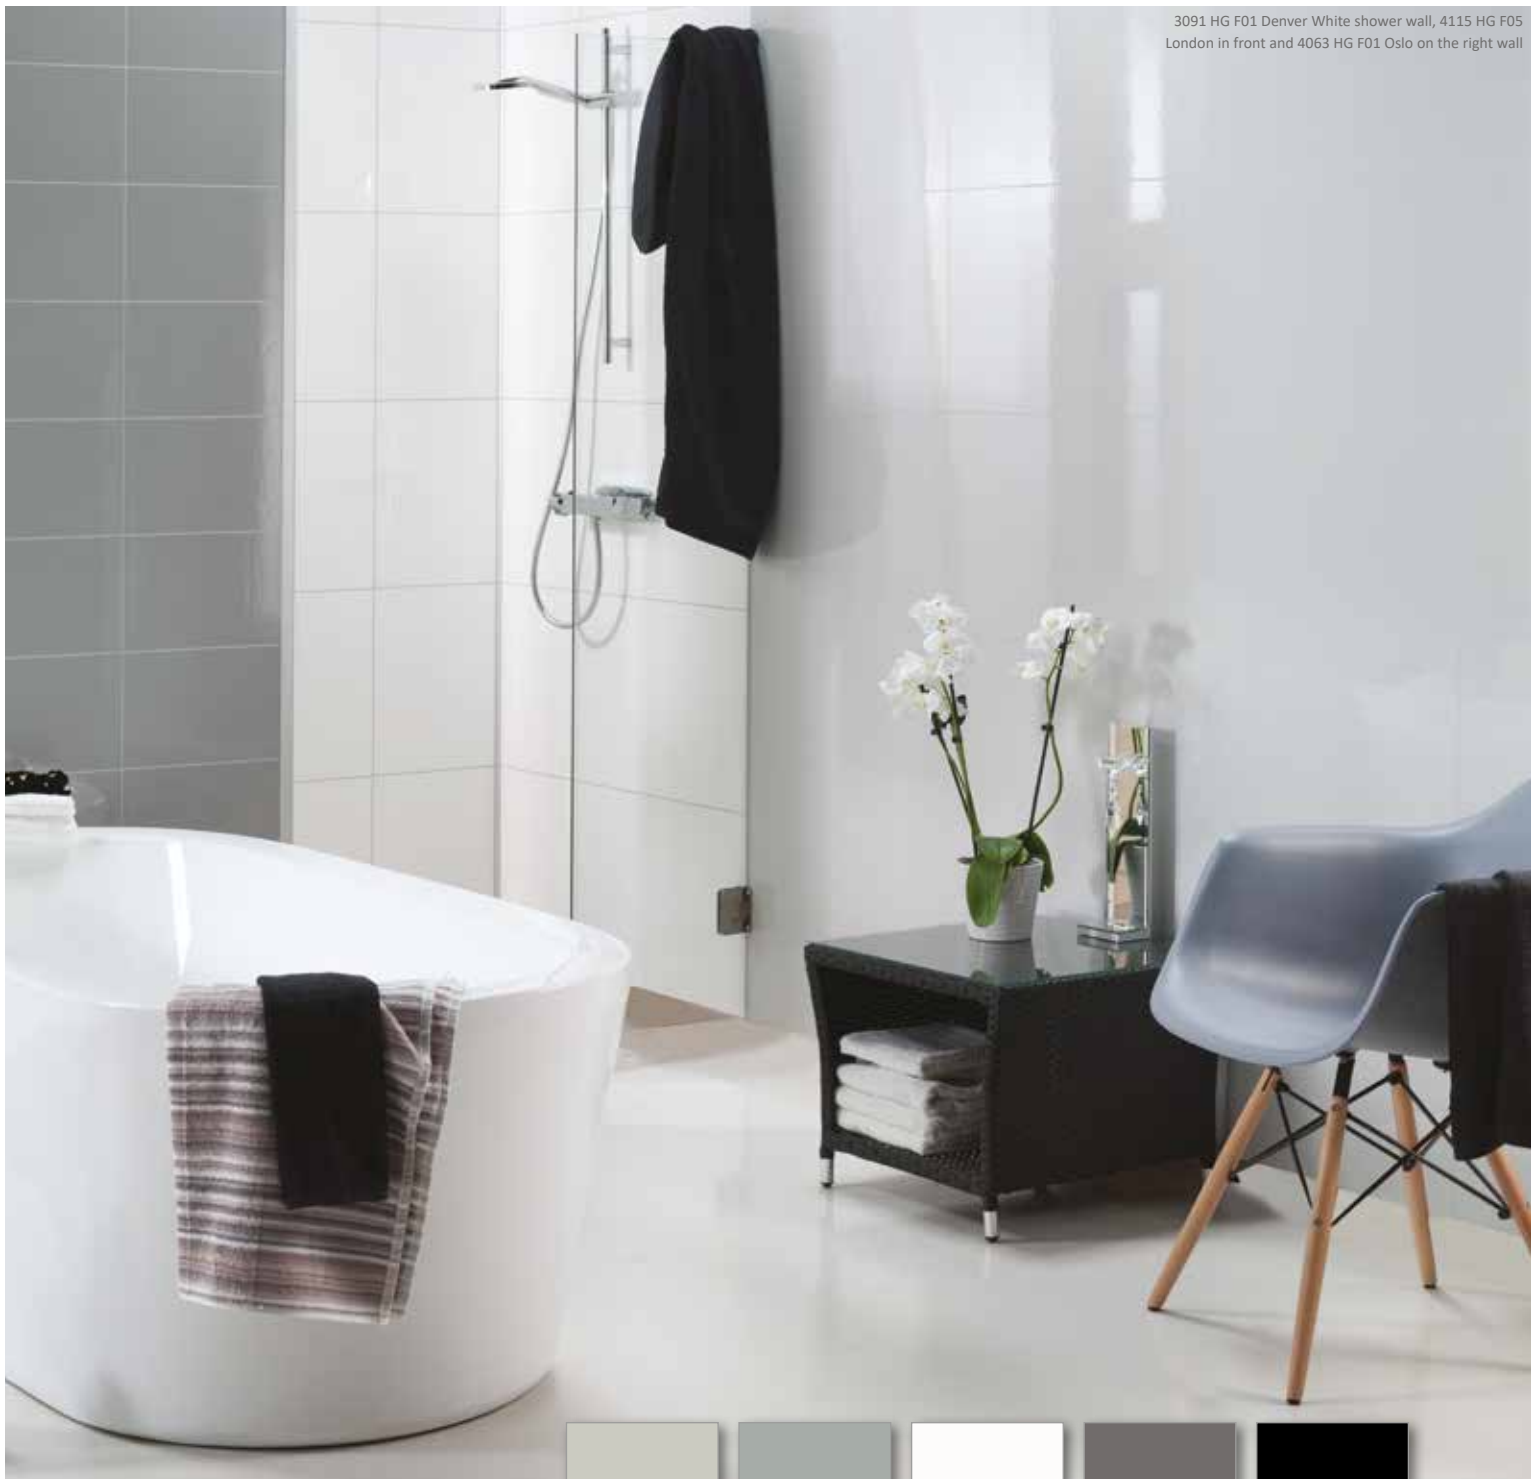

## GREY MINIMALISM

Use gray tones on the wall as a neutral canvas to accentuate the colours within the furniture and accessories of your room.

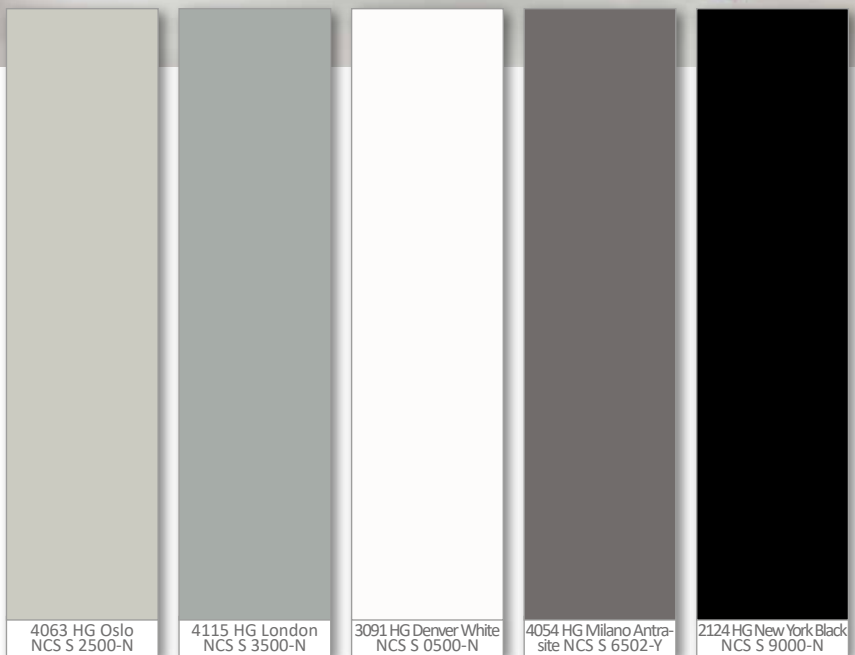


# COLOUR COLLECTION EXTRA MATT



## DESIGN COLOUR COLLECTION EXTRA MATT

Panel 620 x 2400 mm

Fuge 1,8 mm white

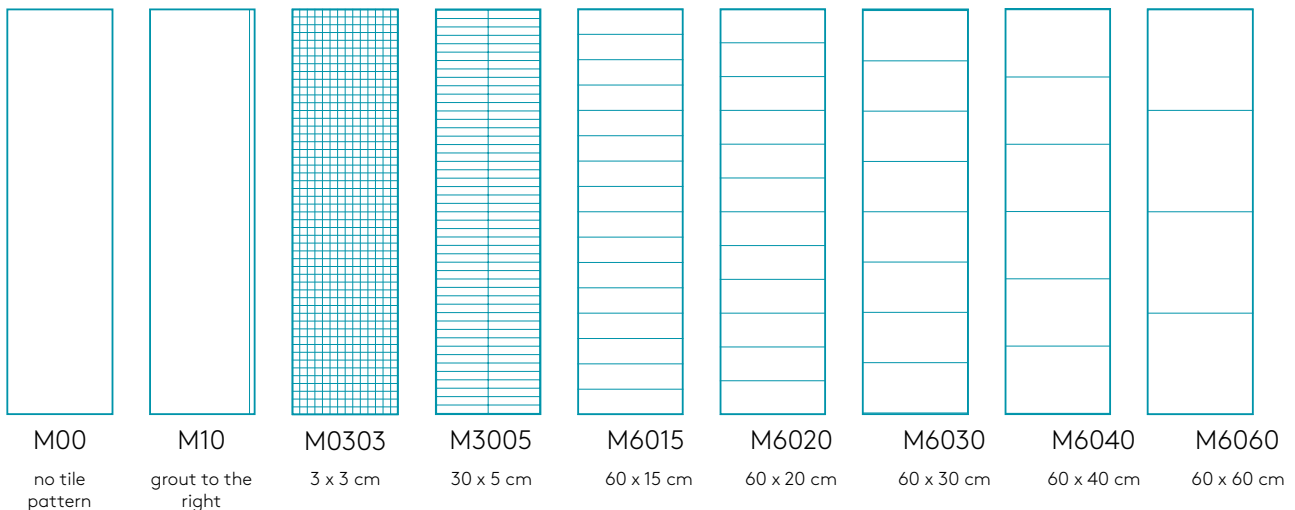



0087-M6040 Extra Matt

Hanoi



1091-M6040 Silk

Rhodos  
White






0091 Cairo EM  
NCS S 1005-Y10Y



2115 San Francisco EM  
NCS S 1005-Y10Y



0091 EM Cairo and 0089 EM Aberdeen M0303 and M6040

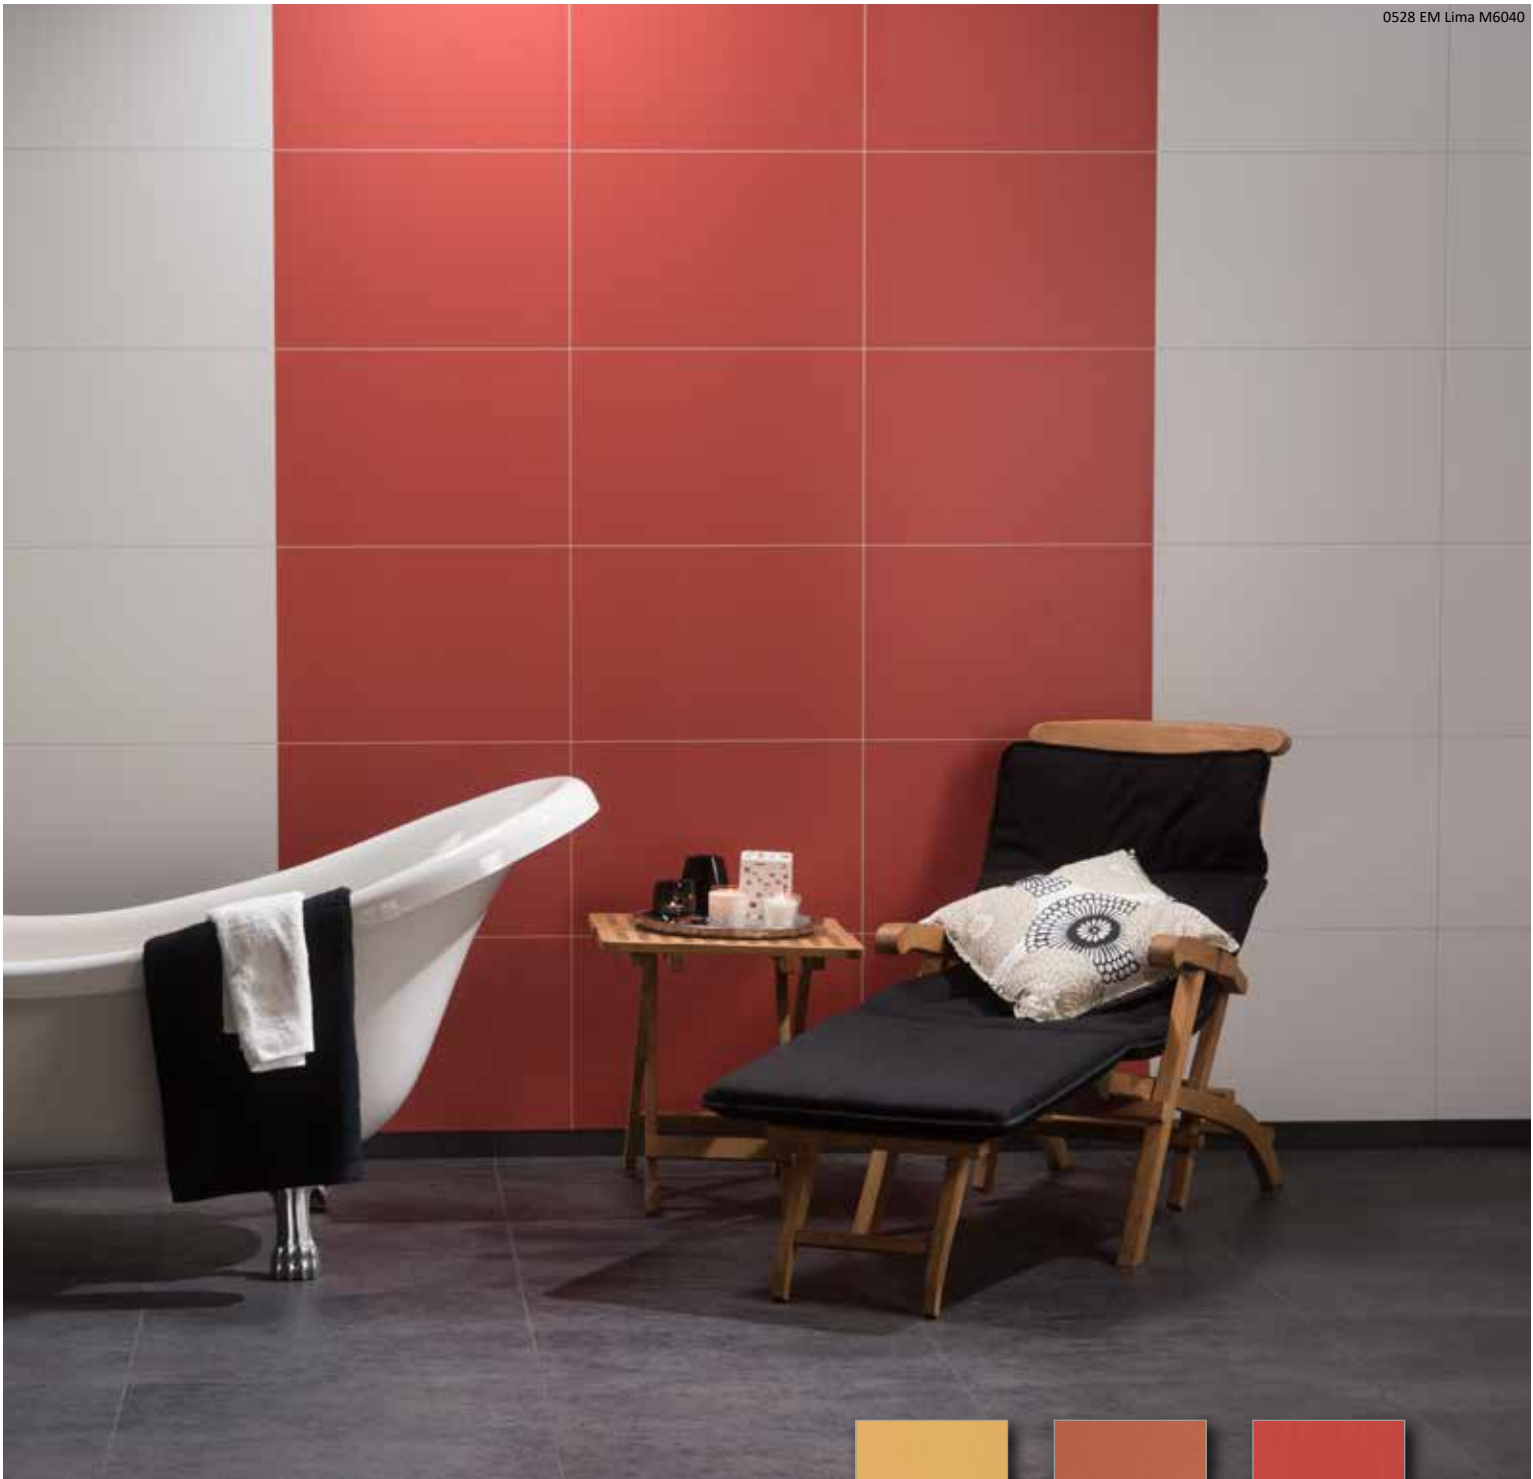

0092 EM Marrakech M6040



0092 Marrakech EM  
NCS S 1030-Y10R



0529 Havana EM  
NCS S 2030-Y60R



0528 Lima EM  
NCS S 2050-Y90R



0090 Svalbard EM  
NCS S 1205-G50Y




0089 Aberdeen EM  
NCS S 4500-N



0433 Reykjavik EM  
NCS S 7005-B20G



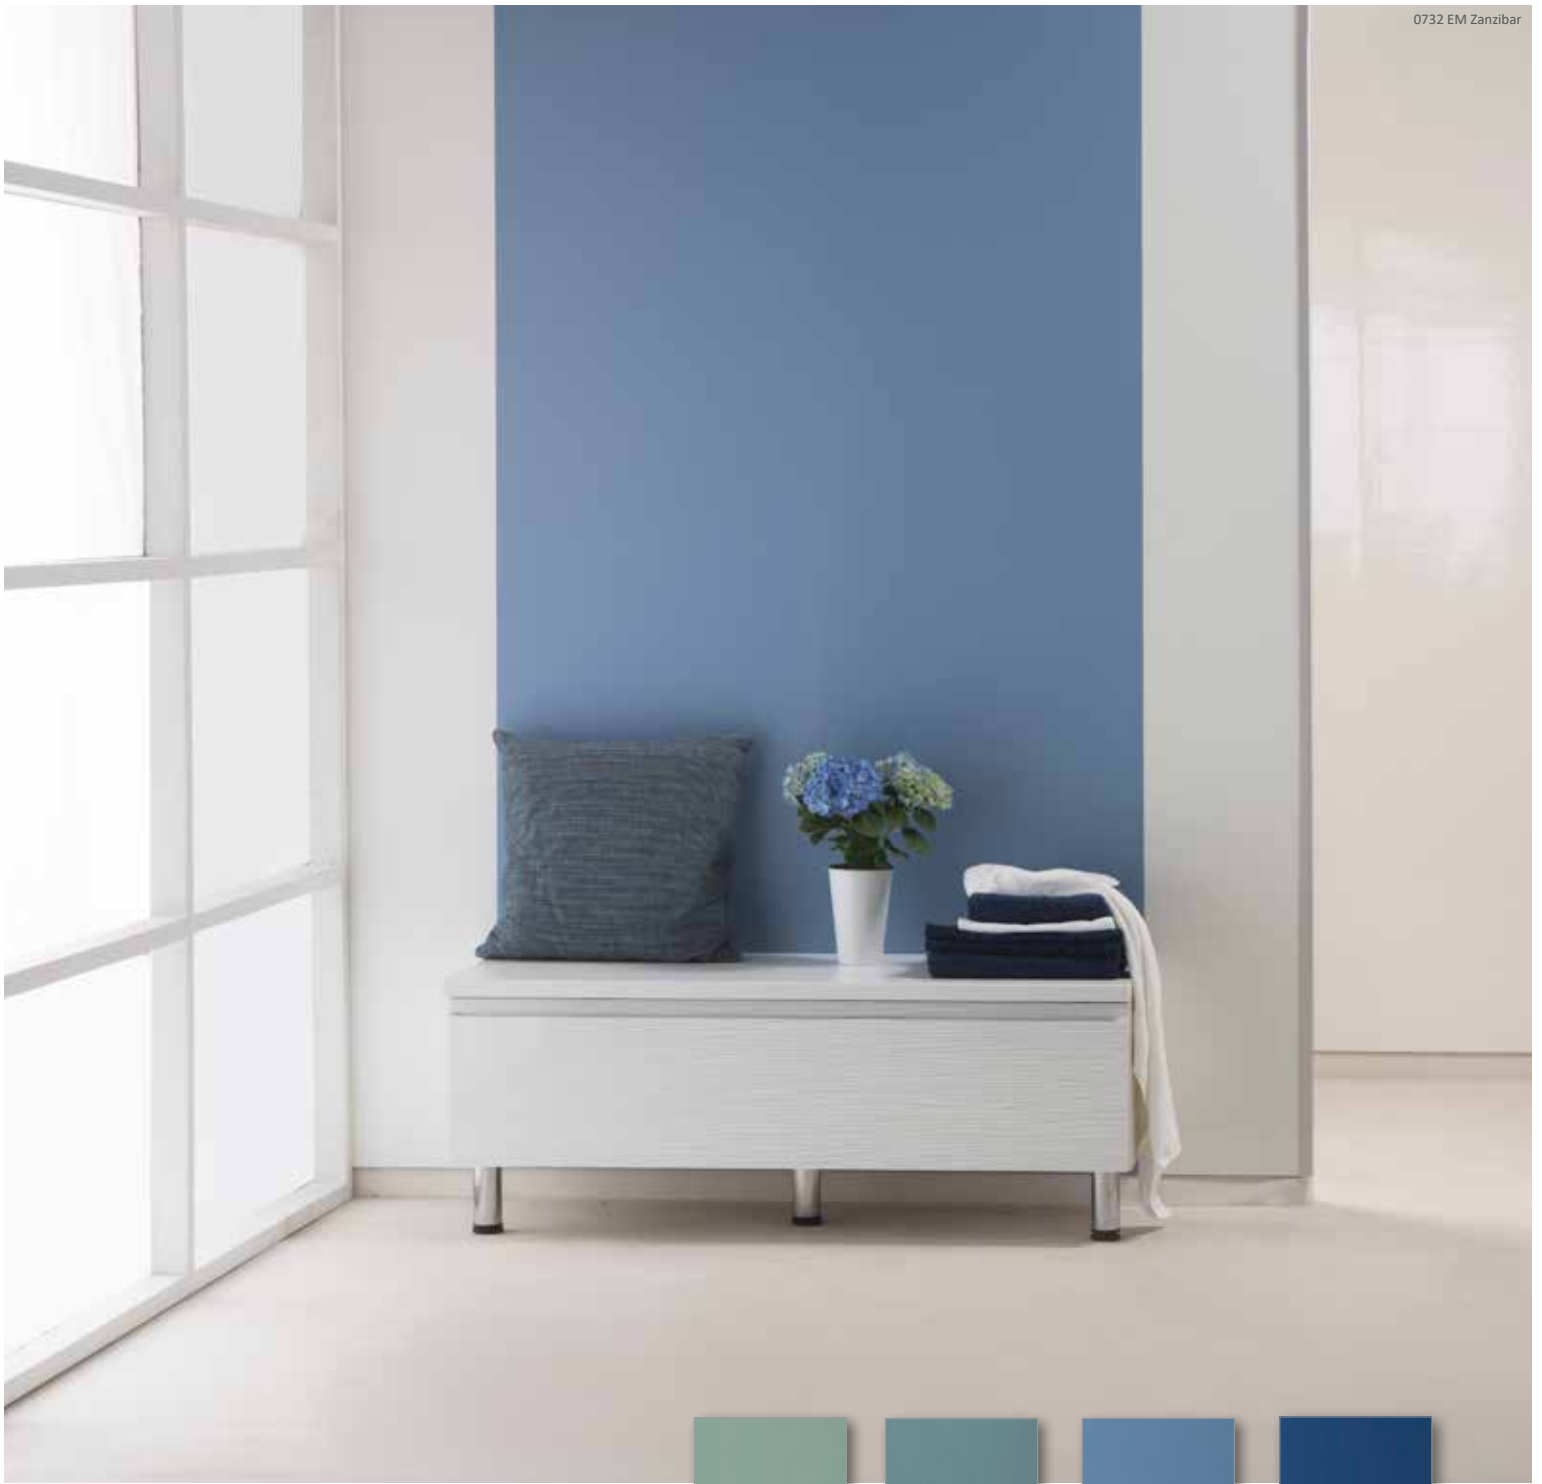

0530 EM Kingston M6020



0087 Hanoi EM  
NCS S 1515-G



0530 Kingston EM  
NCS S 3020-B50G



0732 Zanzibar EM  
NCS S 2030-R80B





0196 Santorini EM  
NCS S 5030-R80B






*..new gorgeous  
bathroom walls  
in a weekend*




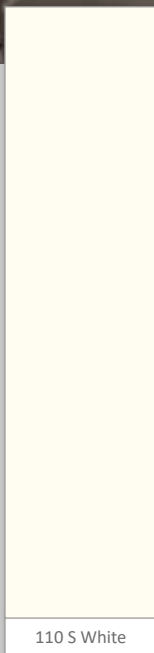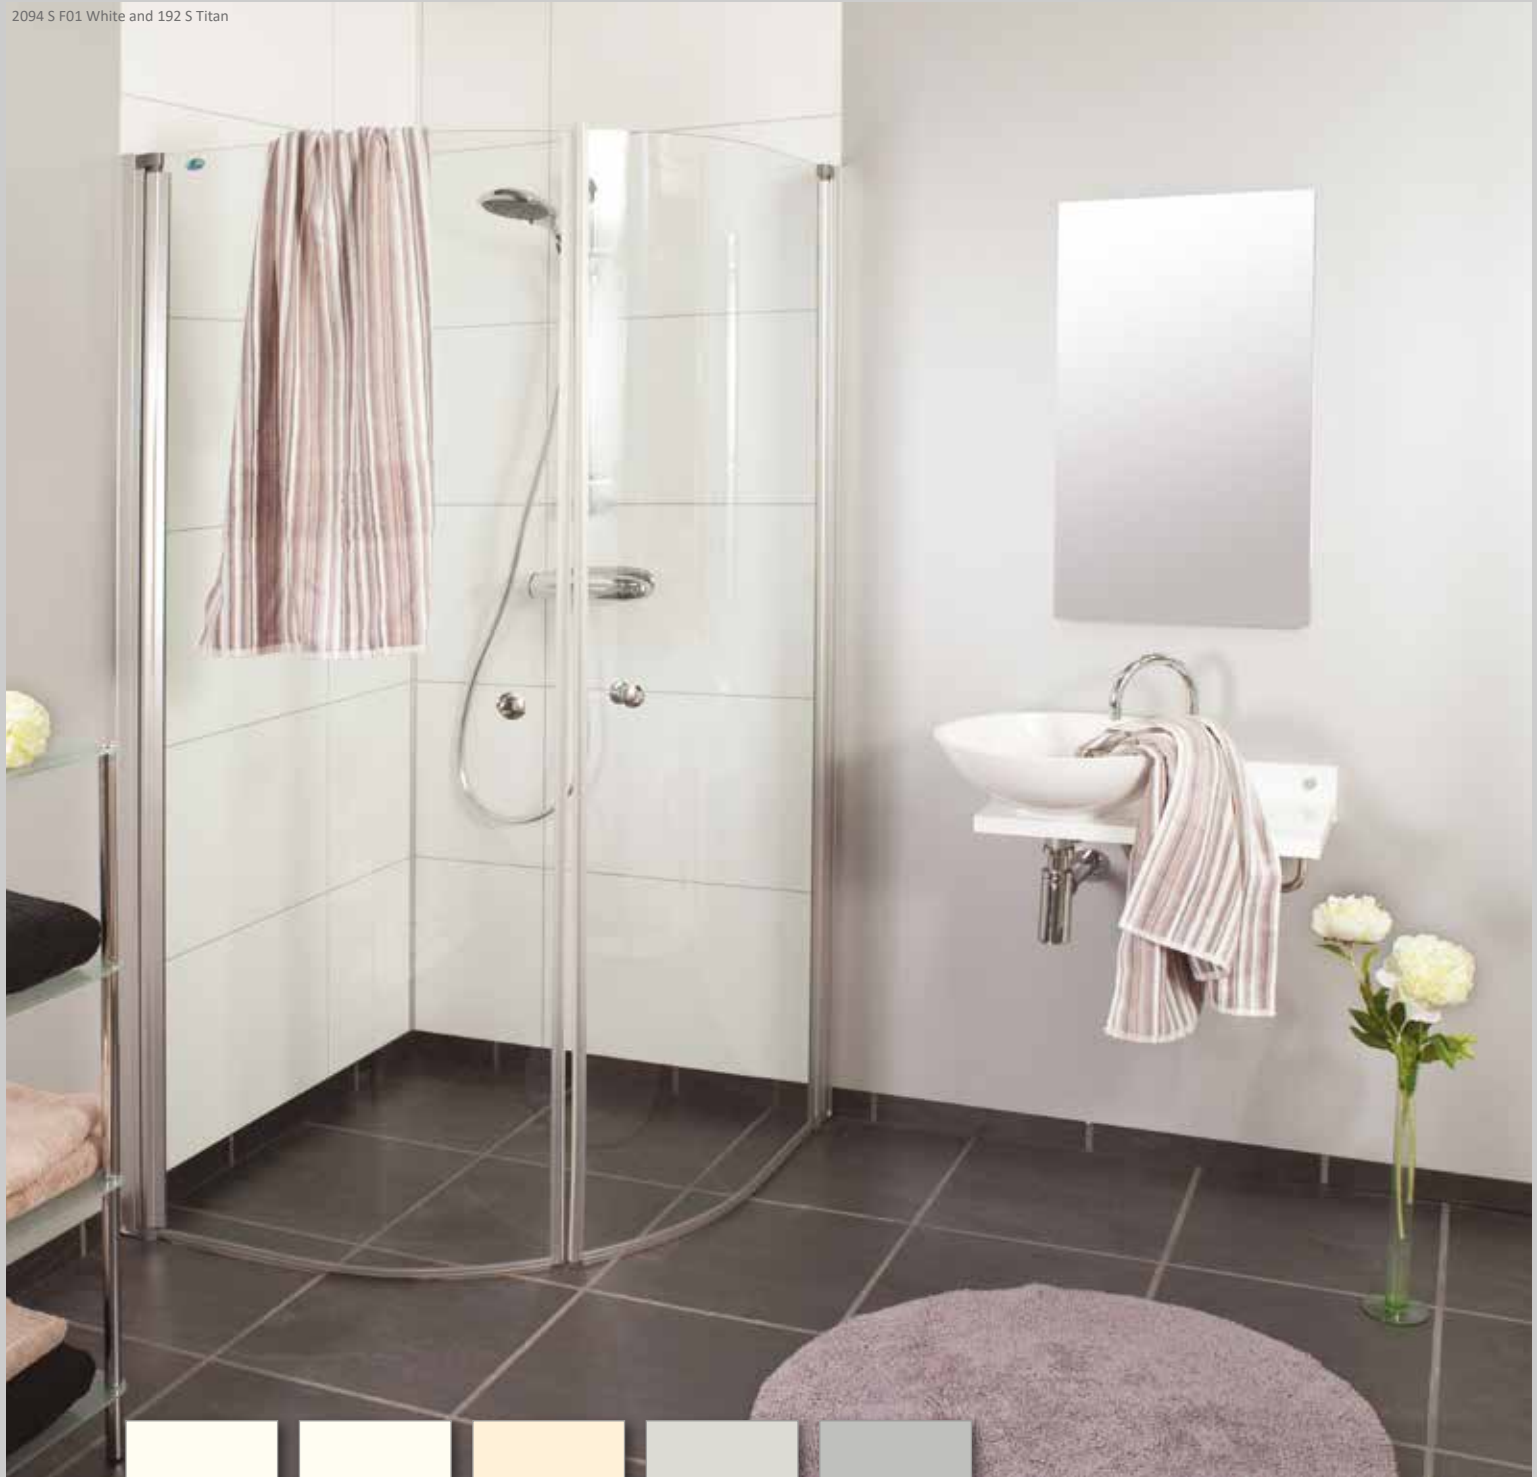


110 S White

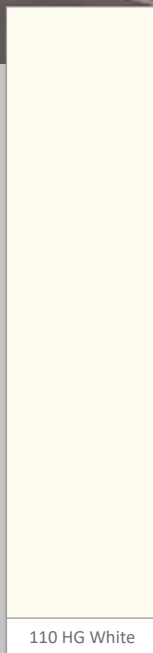


110 HG White

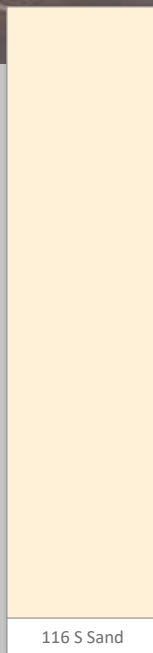

116 S Sand

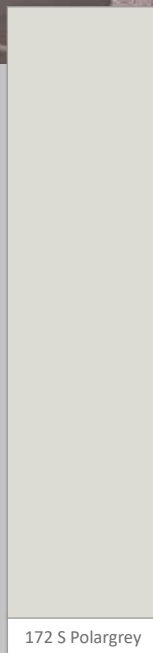

172 S Polargrey

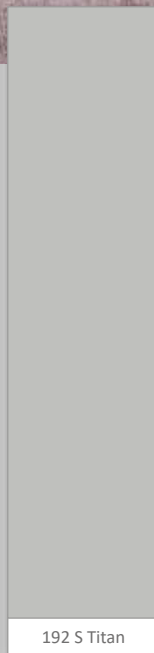

192 S Titan

## LEGATO

Our classic and traditional collection can be successfully used in modern and minimalistic rooms.

The Legato collection has 5 decors- 4 plain colours and the 192 S Titan, which looks like a stainless steel surface. All are easy to clean and maintain.





505 HG  
Gavot



506 HG  
Toscana marmor



520 HG  
Ivory



544 S  
Frostblue

## ADAGIO

This collection is a little more sophisticated, yet still delicate and soft- reflecting modern trends.

This quality product has been used in thousands of bathrooms and wet rooms all over the Nordic countries for decades. What a great pedigree!

7969 SC M66 Rough Wood, 2094 S ME88 White and 4091 SL M63 White Slate



7969 SC M66 Rough Wood




2204 S M63 Cracked Cement



# FIBO AQUALOCK, ACCESSORIES AND PROFILES

- for safe and easy installation!

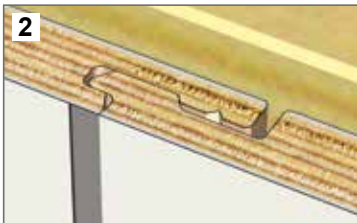

## AQUALOCK

Fibo Wall panels are delivered with the Aqua Lock system. This makes the installation easy and gives a consistent and great result.

Design approval: D21569 No.00 + US.00  
 Patent approval: P24306 No.00 + US.00 + EP.00  
 Fire class D-s1.d0



### Cleaning and maintenance:

Simply wipe with a damp cloth or a mild non-abrasive cream cleaner.  
 Note: Acetone or equivalent must not be used for removing stains, glue or sealant, either on panels or profiles.



### APPROVALS:



### ACCESSORIES:



Note: the colours may differ slightly from the actual product.

Abbreviations: HG = High Gloss, G = Gloss, S = Silk, SL = Slate, EM = Extra Matt, RU = Rustic, SA = Spatolato, SC = Saw cut, C = Cement, P1 = Matt surface with high gloss pattern.

### PROFILE OPTIONS:

All profiles are 2400 mm long



2-part external corner white \*NEW



2-part external corner \*NEW



Internal corner alu.




Internal corner 135°



2-part stacking profile alu



2-part stacking profile white

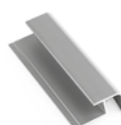

external corner II alu



external corner II white



External corner 135°



Base profile




L-profile (small)



L-profile



Hidden internal corner

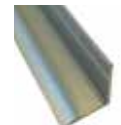

Combi profile corner

Aluminium lists are delivered pre-drilled, grooved and individually plastic wrapped.

# INSTALLING

NORWEGIAN REGULATIONS

with 2-piece internal corner profile or standard internal corner profile.  
Wallpanel with Aqualock.



**Seal the aqualock and the cut edges**


Fibo Seal is recommended as a sealant. It is approved by the norwegian building research institute (nbi) and in accordance with etag 022.



The panels can be mounted on existing walls or on a levelled timber frame with a centre to centre distance of 600 mm and horizontal battens at 800 mm centres. **NB!** When attaching heavy items such as washbasins, there must be additional studding. **NB!** Acclimatisation! The panels **MUST** be stored flat at room temperature for 3 days prior to being used (longer if they have been kept in cold storage).




Where there is a requirement/need for a solid wall behind the panel, a minimum 12 - 15 mm x 18 mm plywood or rough panels should be used. Using a solid wall is an ideal solution for the installation of our 300 mm effect panels.

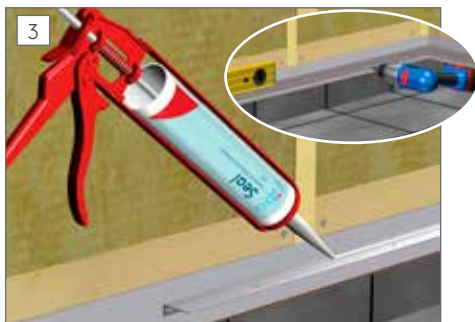

Mount the base profile about 60 - 80 mm from the floor, apply sealant to the lower back of the profile, and screw it to the wall. See also section 18. Applies to both installation with standard and 2-piece internal corner profile. Use a spirit level / laser to ensure that the profile is level.




All installation must be performed from left to right. Reinforcement strip to be screwed in both drip grooves. For installation of wall base trim see section 2

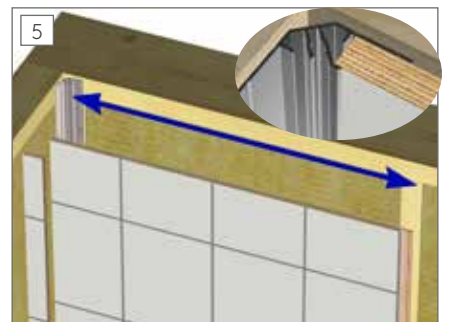

Measure the top and bottom of the first panel, (remember to measure into the profile and to the first studs). Cut the panel and test fit without sealant. **NB!** The panel **MUST** be plumb/ level. Clean cut surfaces, joint edge and under drip nose.




Apply approved sealant on the cut surfaces as shown in the drawing.

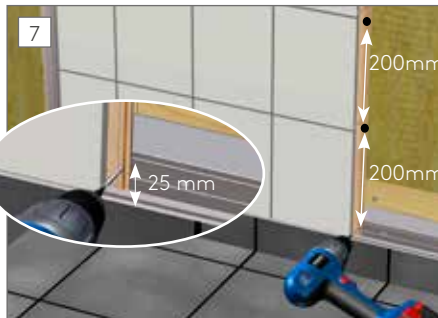


The panel is screwed to the stud as shown in the drawing.




Clean the joint edge and apply sealant on the joint edge and cut surface, prior to clicking it into place.

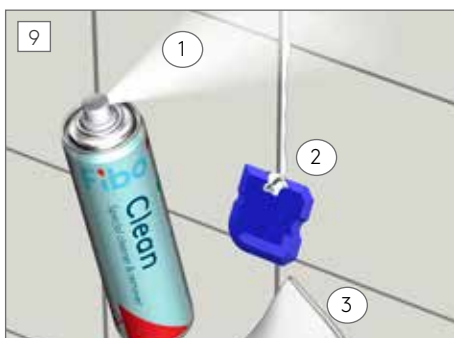

**NB** There should be so much sealant in the joint that the sealant oozes out along the length of the entire joint:  
1. Spray Fibo Clean on the excess sealant  
2. Remove with Fibo Fug  
3. Wipe away any visible sealant residue with Fibo Wipes

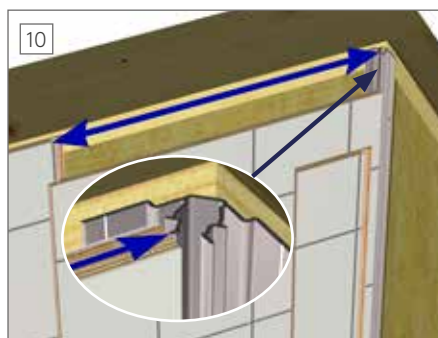

Take precise measurements, as shown in the drawing, but remove 1 - 2 mm. Test-fit without sealant.

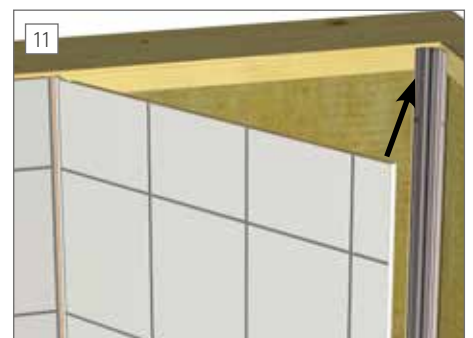


Then fit the panel, by clicking it into place.


# INSTALLING

NORWEGIAN REGULATIONS

with 2-piece internal corner profile or standard internal corner profile.  
Wallpanel with Aqualock.

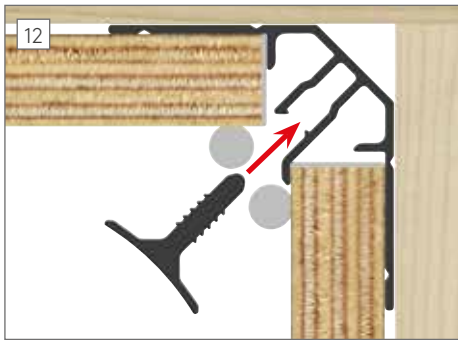

If there is a gap between the panel edge and inner section of the internal profile, this must also be filled with sealant. Apply an approximate 5 mm thick amount of Fibo Seal from the bottom to the top of the sheets on both sides about 4 - 5 mm out from the corner. 2nd cover part of the internal profile to be inserted from the bottom of the panel and slid into the 1st part inner profile. If needed use a tapping block, (tap carefully).

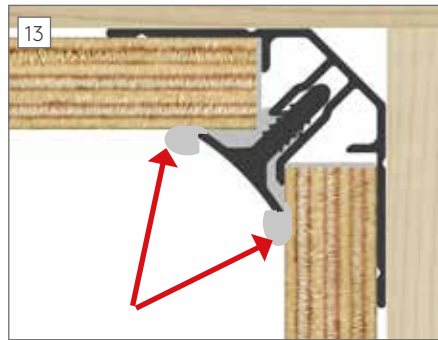

The sealant should ooze out along the entire length of the profile. Excess sealant can be removed with Fibo Clean and a sealing tool.



In order to be approved in accordance with Våtromsnormen (the Norwegian trade norm for wet rooms) an approved sealant must be used. Sealant to be applied as per drawing, see under.



For pipe penetrations, drill out a hole 5 mm larger in diameter than the pipe. Cut surfaces must be cleaned. Use approved pipe penetrations such as Uponor M6 or SanipeX.


## Installing with standard internal corner profile



Start the installation as shown in the drawing. Adjust the length of the panels to meet the ceiling. Set the internal corner profile onto the panel, then fit both panel and corner profile into place, into the corner.  
**NB! The panels replace water vapour resistant foil on outer walls.**



The panels are fastened plumb at the top. Allow at least 5 mm distance up to ceiling. The inner corner profile is attached to the stud using screws through the pre-drilled holes. Remember to countersink the screws.

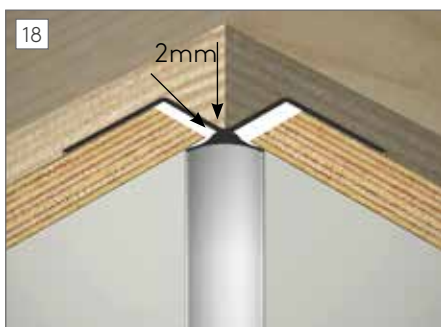

Make sure the next panel is plumb and adjusted to fit the next stud. Allow about 2 mm expansion in the inside corner moulding. In wet zones membrane should go up min. 45 mm behind the base profil/panel.



The final panel is folded at one side so that the joint will be neat and is fastened with staples, concealed by ceiling cornices and door architraves.



001/FT-CPR-2013  
1071-CPD-1049

Fibo-Trespo AS,  
N4580 Lyngdal Norway  
04

EN 13986  
EN636-2  
EN 335-3 class 2  
E1 D-sl.d0 EN B501-1

As the panels may have sharp edges, the use of gloves during assembly is recommended.

As a filler/sealant we recommend Fibo seal.

Fibo seal is approved by the norwegian building research institute (nbi) and in accordance with etag 022

# HIDDEN CORNER PROFILE AND COMBI PROFILE INSTALLATION


## HIDDEN CORNER PROFILE




Start the installation above the door. Profile comes predrilled. Corner profile fixed into the back of the panel with a special screws as shown (included in the package of profile). In the shower area all edges lubricated with Fibo Seal or other MS Polymer sealant.



The inner corner profile fixed to the upright in pre finished countersunk holes. Fit the next panel in width and height, apply sealant on the edges and slide the panel into the corner.

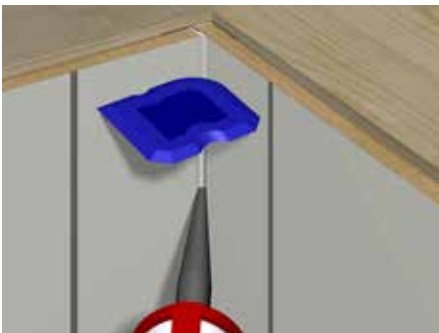

Apply sealant (MS Polymer) in the corner (preferably using masking tape for the best possible result). Clean with Fibo clean, Fibo fug and Fibo Wipes or alternative cleaners.

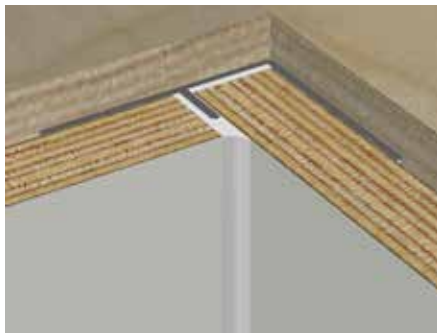

Finished!

## COMBI PROFILE

Use a 12 mm plywood, or 23x48 mm strips mounted vertically at each corner, and horizontally if using wooden strips with c/c 30 cm. It is particularly important that there is a horizontal stud behind the Fibo panel, where the bottom of the toilet bowl if fitted.



From the rear wall, the combi profile can be used as illustrated in the picture. This is screwed into the vertical stud. If this is an area that is exposed to water splashes, we also recommend sealing with sealant so that watertight transitions from the laminate side to the profile.



The panel joints on the outside corners can either be worn with L-profile narrow or L-profile wide. Alternative it can be solved with an aluminium external corner profile



**FINISHED!**

# Correct accessories are half the job

Fibo offers a complete system to ensure optimal results and make the installation as easy as possible for you. The customized accessories ensure a perfect and safe result.



FIBO SEAL



FIBO CLEAN



FIBO WIPES



FIBO SEALING TOOL



FIBO SCREWS

Fibo | A smart way to transform your wall

## What do I need?

This is what you need, based on bathroom sizes of 6, 12 or 18 M<sup>2</sup>.

BATHROOM 6M <sup>2</sup>		BATHROOM 12 M <sup>2</sup>		BATHROOM 18 M <sup>2</sup>	
Wall panels:	18 pieces	Wall panels:	24 pieces	Wall panels:	30 pieces
Internal corners:	4 pieces	Internal corners:	4 pieces	Internal corners:	4 pieces
Base/bottom profiles:	5 pieces	Base/bottom profiles:	6 pieces	Base/bottom profiles:	8 pieces
Screws:	1 box of 200	Screws:	2 boxes of 200	Screws:	1 box of 1000
Fibo Seal:	4 pieces	Fibo Seal:	5 pieces	Fibo Seal:	6 pieces
Fibo Clean:	1 can	Fibo Clean:	1 can	Fibo Clean:	2 can
Fibo Wipes:	1 can	Fibo Wipes:	1 can	Fibo Wipes:	2 can

In addition, you will need equipment such as screwdriver/powertools, drill for pipes, leveler, measure tape, and a fine toothed saw. All our installation guides and videos are available at [fibo.co.uk](http://fibo.co.uk)

**Fibo**

A smart way to  
transform your  
bathroom wall



0318 - 20000x Trykk: Kati Hansen as

**Fibo AS**

Industrivn 2  
N- 4580 Lyngdal

Tlf.: 38 34 33 00

E-post: [info@fibosystem.com](mailto:info@fibosystem.com)  
[www.fibosystem.com](http://www.fibosystem.com)